

CBR500RA/RAC_CB500FA/FAC/XA/XAC

OWNER'S MANUAL



This manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is resold.

This publication includes the latest production information available before printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

The vehicle pictured in this owner's manual may not match your actual vehicle.

India only

For any query or assistance, please call Customer care number: 1800 103 3434 (Toll free)

Welcome

Congratulations on your purchase of a new Honda vehicle. Your selection of a Honda makes you part of a worldwide family of satisfied customers who appreciate Honda's reputation for building quality into every product.

To ensure your safety and riding pleasure:

- Read this owner's manual carefully.
- Follow all recommendations and procedures contained in this manual.
- Pay close attention to safety messages contained in this manual and on the vehicle.

- The following codes in this manual indicate each destination.
- The illustrations here in are based on the CB500XAC ED type.

Destination Codes

Code Destination

CB500FA

ED, II ED	European direct sales, UK, Turkey, New Zealand, Serbia, Israel, North Macedonia, Montenegro, Gibraltar, Costa Rica, Argentina, Guyana
-----------	---

CBR500RA

ED, III ED	European direct sales, UK, Turkey, New Zealand, Serbia, Israel, North Macedonia, Montenegro, Gibraltar, Costa Rica, Mexico, Ecuador
TH, III TH	Thailand

CB500XA

ED, II ED	European direct sales, UK, Turkey, New Zealand, Serbia, Israel, North Macedonia, Montenegro, Gibraltar, Argentina, Ukraine, India, South Africa
LA, II LA	Ecuador, Bolivia, Guatemala, Honduras, Paraguay, Costa Rica, Mexico
TH, II TH	Thailand

CB500FAC

ED, II ED	European direct sales, UK, Turkey, New Zealand, Serbia, Israel, North Macedonia, Montenegro, Gibraltar, Jamaica, Argentina
V, II V	Vietnam
PH, II PH	Philippines

CBR500RAC

ED, III ED	European direct sales, UK, Turkey, New Zealand, Serbia, Israel, North Macedonia, Montenegro, Gibraltar, Mexico
TH, III TH	Thailand
III V	Vietnam
III PH	Philippines
KO, III KO	Korea

CB500XAC

ED, II ED	European direct sales, UK, Turkey, New Zealand, Serbia, Israel, North Macedonia, Montenegro, Gibraltar, Argentina, Ukraine, India, South Africa
LA, II LA	Ecuador, Peru, Guatemala, Honduras, Paraguay, El Salvador, Panama, Dominican Republic, Costa Rica, Mexico
TH, II TH	Thailand
V, II V	Vietnam
II PH	Philippines
KO, II KO	Korea

*The specifications may vary with each locale.


A Few Words About Safety

Your safety, and the safety of others, is very important. Operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on safety labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a vehicle. You must use your own good judgement.

You will find important safety information in a variety of forms, including:

- Safety labels on the vehicle.
- Safety Messages preceded by a safety alert symbol  and one of three signal words: DANGER, WARNING, or CAUTION.

These signal words mean:

DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION

You **CAN** be **HURT** if you don't follow instructions.

Other important information is provided under the following title:

NOTICE Information to help you avoid damage to your vehicle, other property, or the environment.

Contents

Vehicle Safety

P. 2

Operation Guide

P. 20

Maintenance

P. 113

Troubleshooting

P. 157

Information

P. 175

Specifications

P. 200

Vehicle Safety

This section contains important information for safe riding of your vehicle.
Please read this section carefully.

Safety Guidelines	P. 3
Image Labels	P. 7
Safety Precautions	P. 13
Riding Precautions	P. 14
Accessories & Modifications	P. 18
Loading	P. 19

Safety Guidelines

Follow these guidelines to enhance your safety:

- Perform all routine and regular inspections specified in this manual.
- Stop the engine and keep sparks and flames away before filling the fuel tank.
- Do not run the engine in enclosed or partly enclosed areas. Carbon monoxide in exhaust gases is toxic and can kill you.

Always Wear a Helmet

It's a proven fact: helmets and protective apparel significantly reduce the number and severity of head and other injuries. Always wear an approved helmet and protective apparel.

➔ P. 13

Before Riding

Except CB500XA/XAC

Make sure that you are physically fit, mentally focused, and free of alcohol and drugs. Check that you and your passenger are both wearing an approved helmet and protective apparel. Instruct your passenger on holding onto the seat strap or your waist, leaning with you in turns, and keeping their feet on the footpegs, even when the vehicle is stopped.

CB500XA/XAC

Make sure that you are physically fit, mentally focused, and free of alcohol and drugs. Check that you and your passenger are both wearing an approved helmet and protective apparel. Instruct your passenger on holding onto the grab rails or your waist, leaning with you in turns, and keeping their feet on the footpegs, even when the vehicle is stopped.

Take Time to Learn & Practice

Even if you have ridden other vehicles, practice riding in a safe area to become familiar with how this vehicle works and handles, and to become accustomed to the vehicle's size and weight.

Ride Defensively

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or perform an evasive maneuver.

Make Yourself Easy to See

Make yourself more visible, especially at night, by wearing bright reflective clothing, positioning yourself so other drivers can see you, signaling before turning or changing lanes, and using your horn when necessary.

Ride within Your Limits

Never ride beyond your personal abilities or faster than conditions warrant. Fatigue and inattention can impair your ability to use good judgement and ride safely.

Don't Drink or Use Drugs and Ride


Alcohol or drugs and riding don't mix. Even one alcoholic drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. The same is true for drug use. Don't drink or use and ride, and don't let your friends do it either.

Keep Your Honda in Safe Condition

It's important to keep your vehicle properly maintained and in safe riding condition. Inspect your vehicle before every ride and perform all recommended maintenance. Never exceed load limits (➤ P. 19), and do not modify your vehicle or install accessories that would make your vehicle unsafe (➤ P. 18).

If You are Involved in a Crash

Personal safety is your first priority. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the crash.

If you decide to continue riding, first turn the ignition switch to the  (Off) position, and evaluate the condition of your vehicle. Inspect

for fluid leaks, check the tightness of critical nuts and bolts, and check the handlebar, control levers, brakes, and wheels. Ride slowly and cautiously.

Your vehicle may have suffered damage that is not immediately apparent. Have your vehicle thoroughly checked at a qualified service facility as soon as possible.

Carbon Monoxide Hazard

Exhaust contains poisonous carbon monoxide, a colourless, odorless gas. Breathing carbon monoxide can cause loss of consciousness and may lead to death.

If you run the engine in a confined or even partly enclosed area, the air you breathe could contain a dangerous amount of carbon monoxide.

Never run your vehicle inside a garage or other enclosure.

WARNING

Running the engine of your vehicle while in an enclosed or even partially enclosed area can cause a rapid build-up of toxic carbon monoxide gas.

Breathing this colourless, odorless gas can quickly cause unconsciousness and lead to death.

Only run your vehicle's engine when it is located in a well ventilated area outdoors.

Image Labels

The following pages describe the label meanings. Some labels warn you of potential hazards that could cause serious injury. Others provide important safety information. Read this information carefully and don't remove the labels.

If a label comes off or becomes hard to read, contact your dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.



Read instructions contained in Owner's Manual carefully.



Read instructions contained in Shop Manual carefully. In the interest of safety, take the vehicle to be serviced only by your dealer.



DANGER (with RED background)

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING (with ORANGE background)

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION (with YELLOW background)

You **CAN** be **HURT** if you don't follow instructions.

sample



BATTERY LABEL DANGER

Except LA, II LA type

- Keep flame and spark away from the battery. Battery produce explosive gas that can cause explosion.
- Wear the eye protection and rubber gloves when handling the battery, or you can get burned or lose your eyesight by the battery electrolyte.
- Do not allow children and other people to touch a battery unless they understand proper handling and hazards of the battery very well.
- Handle the battery electrolyte with extreme care as it contains dilute sulfuric acid. Contact with your skin or eyes can burn you or cause loss of your eyesight.
- Read this manual carefully and understand it before handling the battery. Neglect of the instructions can cause personal injury and damage to the vehicle.
- Do not use a battery with the electrolyte at or below the lower level mark. It can explode causing serious injury.
- Do not knock down the battery.
- Do not put in short the terminals of the battery.

**RADIATOR CAP LABEL****DANGER**

ED, II ED, III ED, PH, II PH, III PH, LA, II LA type

NEVER OPEN WHEN HOT.

Hot coolant will scald you.

Relief pressure valve begins to open at **1.1 kgf/cm²**.

CB500FA/FAC/
CBR500RA/RAC
ED, II ED, III ED type



CB500XA/XAC ED, II ED,
LA, II LA type



ACCESSORIES AND LOADING WARNING LABEL WARNING

ACCESSORIES AND LOADING

- The safety stability and handling of this vehicle may be affected by the addition of accessories and luggage.
- Read carefully the instructions contained in user's manual and installation guide before installing any accessory.
- **CB500FA/FAC/CBR500RA/RAC ED, II ED, III ED type**

The total weight of accessories and luggage added to rider's and passenger's weight should not exceed **182 kg (401 lb)**, which is the maximum weight capacity.

CB500XA/XAC ED, II ED, LA, II LA type

The total weight of accessories and luggage added to rider's and passenger's weight should not exceed **190 kg (419 lb)**, which is the maximum weight capacity.

- **CB500FA/FAC/CBR500RA/RAC ED, II ED, III ED type**

The luggage weight must not exceed **11 kg (24 lb)** under any circumstances.

CB500XA/XAC ED, II ED, LA, II LA type

The luggage weight must not exceed **12 kg (26 lb)** under any circumstances.

- The fitting of large fork-mounted or large handlebar mounted fairing is not recommended.

**REAR CUSHION LABEL**

Except KO, II KO, III KO, TH, II TH, III TH type

GAS FILLED

Do not open. Do not heat.

TYRE INFORMATION & DRIVE CHAIN LABEL

CB500FA/FAC/CBR500RA/RAC

Except TH, III TH, KO, III KO type

Cold tyre pressure:

[Driver only]

Front **250 kPa (2.50 kgf/cm², 36 psi)**

Rear **290 kPa (2.90 kgf/cm², 42 psi)**

 
[Driver and passenger]

 
Front **250 kPa (2.50 kgf/cm², 36 psi)**

Rear **290 kPa (2.90 kgf/cm², 42 psi)**

Keep chain adjusted and lubricated.

Freeplay **25 - 35 mm (1.0 - 1.4 in)**

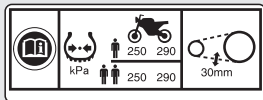

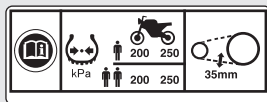

CB500XA/XAC

Except TH, II TH, KO, II KO type

Cold tyre pressure:

[Driver only]

Front **200 kPa (2.00 kgf/cm², 29 psi)**

Rear **250 kPa (2.50 kgf/cm², 36 psi)**

[Driver and passenger]

Front **200 kPa (2.00 kgf/cm², 29 psi)**

Rear **250 kPa (2.50 kgf/cm², 36 psi)**

Keep chain adjusted and lubricated.

Freeplay **30 - 40 mm (1.2 - 1.6 in)**



SAFETY REMINDER LABEL

Except KO, II KO, III KO, TH, II TH, III TH type

For your protection, always wear helmet, protective apparel.

FUEL LABEL

Unleaded petrol only

ETHANOL up to 10 % by volume

Safety Precautions

- Ride cautiously and keep your hands on the handlebar and feet on the footpegs.
- **Except CB500XA/XAC**
Instruct your passenger to keep their hands on the seat strap or your waist and their feet on the footpegs while riding.
- **CB500XA/XAC**
Instruct your passenger to keep their hands on the grab rails or your waist and their feet on the footpegs while riding.
- Always consider the safety of your passenger, as well as other drivers and riders.

Protective Apparel

Make sure that you and any passenger are wearing an approved helmet, eye protection, and high-visibility protective clothing. Avoid wearing loose clothes that could get caught on any part of the vehicle. Ride defensively in response to weather and road conditions.

■ Helmet

Should be safety-standard certified, high-visibility, and the correct size for your head.

- Must fit comfortably but securely, with the chin strap fastened.
- Face shield with unobstructed field of vision or other approved eye protection.

WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Make sure that you and any passenger always wear an approved helmet and protective apparel.

Riding Precautions

| Gloves

Full-finger leather gloves with high abrasion resistance.

| Boots or Riding Shoes

Sturdy boots with non-slip soles and ankle protection.

| Jacket and Trousers

Protective, highly visible, long-sleeved jacket and durable trousers for riding (or a protective suit).

Riding Precautions

Running-in Period

During the first 500 km (300 miles) of running, follow these guidelines to ensure your vehicle's future reliability and performance.

- Avoid full-throttle starts and rapid acceleration.
- Avoid hard braking and rapid down-shifts.
- Ride conservatively.

Brakes

Observe the following guidelines:

- Avoid excessively hard braking and downshifting.
 - ▶ Sudden braking can reduce the vehicle's stability.
 - ▶ Where possible, reduce speed before turning; otherwise, you risk sliding out.

- Exercise caution on low traction surfaces.
 - ▶ The tyres slip more easily on such surfaces and braking distances are longer.
- Avoid continuous braking.
 - ▶ Repeated braking, such as when descending long, steep slopes, can seriously overheat the brakes, reducing their effectiveness. Use engine braking with intermittent use of the brakes to reduce speed.
- For full braking effectiveness, operate both the front and rear brakes together.

| Anti-lock Brake System (ABS)

This model is equipped with an Anti-lock Brake System (ABS) designed to help prevent the brakes from locking up during hard braking.

- ABS does not reduce braking distance. In certain circumstances, ABS may result in a longer stopping distance.
- ABS does not function at speeds below 10 km/h (6 mph).

- The brake lever and pedal may recoil slightly when applying the brakes. This is normal.
- Always use the recommended front/rear tyres and sprockets to ensure correct ABS operation.

| Engine Braking

Engine braking helps slow your vehicle down when you release the throttle. For further slowing action, downshift to a lower gear. Use engine braking with intermittent use of the brakes to reduce speed when descending long, steep slopes.

| Wet or Rainy Conditions

Road surfaces are slippery when wet, and wet brakes further reduce braking efficiency. Exercise extra caution when braking in wet conditions.

If the brakes get wet, apply the brakes while riding at low speed to help them dry.


Riding Precautions

Parking

- Park on a firm, level surface.
- If you must park on a slight incline or loose surface, park so that the vehicle cannot move or fall over.
- Make sure that high-temperature parts cannot come into contact with flammable materials.
- Do not touch the engine, muffler, brakes, and other high-temperature parts until they cool down.
- To reduce the likelihood of theft, always lock the handlebar and remove the key when leaving the vehicle unattended. Use of an anti-theft device is also recommended.

I Parking with the Side Stand

1. Stop the engine.
2. Push the side stand down.
3. Slowly lean the vehicle to the left until its weight rests on the side stand.

4. Turn the handlebar fully to the left.
 - ▶ Turning the handlebar to the right reduces stability and may cause the vehicle to fall.
5. Turn the ignition switch to the  (Lock) position and remove the key. ➡ P. 86

Refuelling and Fuel Guidelines

Follow these guidelines to protect the engine, fuel system, and catalytic converter:

- Use only unleaded petrol.
- Use the recommended octane number. Using lower octane petrol will result in decreased engine performance.
- Do not use fuels containing a high concentration of alcohol. ➡ P. 198
- Do not use stale or contaminated petrol or an oil/petrol mixture.
- Avoid getting dirt or water in the fuel tank.

Honda Selectable Torque Control

When the Honda Selectable Torque Control (Torque Control) detects rear wheel spin during acceleration, the system will limit the amount of torque applied to the rear wheel.

Torque Control does not work during deceleration and will not prevent the rear wheel from skidding due to engine braking. Do not close the throttle suddenly, especially when riding on slippery surfaces.

Torque Control may not compensate for rough road conditions or rapid throttle operation.

Always consider road and weather conditions, as well as your skills and condition, when applying throttle.

If your vehicle gets stuck in mud, snow, or sand, it may be easier to free it by turning off the Torque Control temporarily.

Temporarily turning off Torque Control also may help you maintain control and balance when riding on off-road terrain.

Always use the recommended tyres and sprockets to ensure correct Torque Control operation.

Accessories & Modifications

We strongly advise that you do not add any accessories that were not specifically designed for your vehicle by Honda or make modifications to your vehicle from its original design. Doing so can make it unsafe. Modifying your vehicle may also void your warranty and make your vehicle illegal to operate on public roads. Before deciding to install accessories on your vehicle, be certain the modification is safe and legal.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Do not pull a trailer with, or attach a sidecar to, your vehicle. Your vehicle was not designed for these attachments, and their use can seriously impair your vehicle's handling.

Loading

- Carrying extra weight affects your vehicle's handling, braking, and stability.
Always ride at a safe speed and never exceed 130 km/h (80 mph) for the load you are carrying.

- Avoid carrying an excessive load and keep within specified load limits.

Maximum weight capacity / Maximum luggage weight ➤ P. 200

- Tie all luggage securely, evenly balanced, and close to the centre of the vehicle.
- Do not place objects near the lights or the muffler.


WARNING


Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.


Parts Location


CB500FA

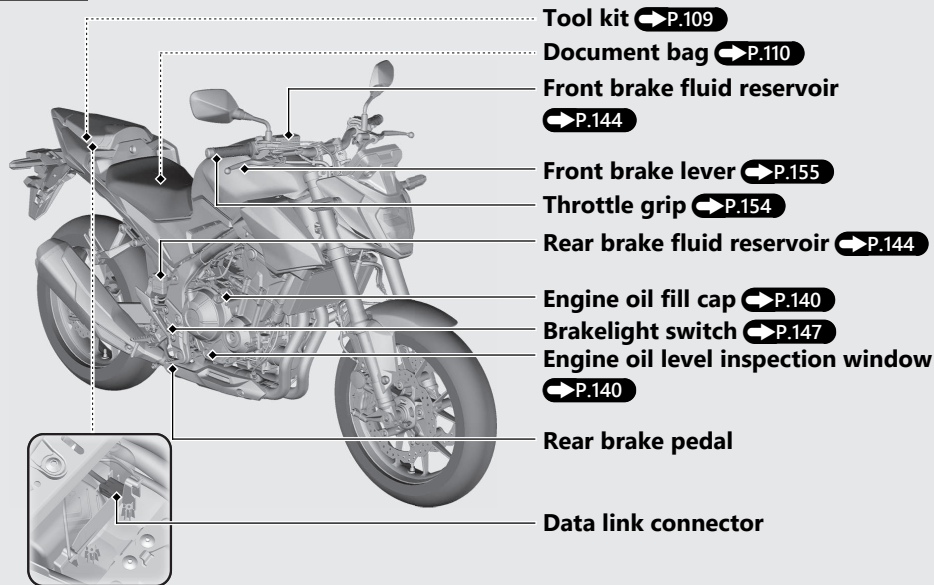

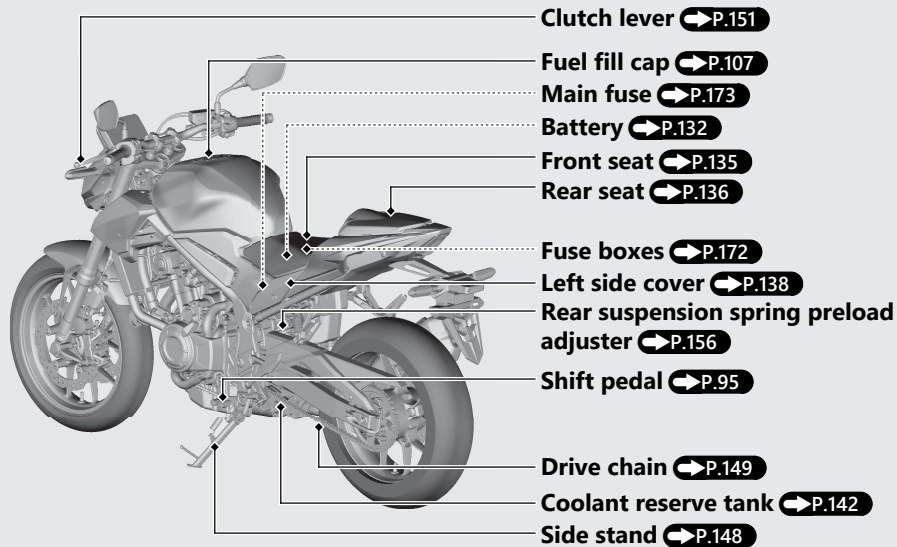



Parts Location *(Continued)*

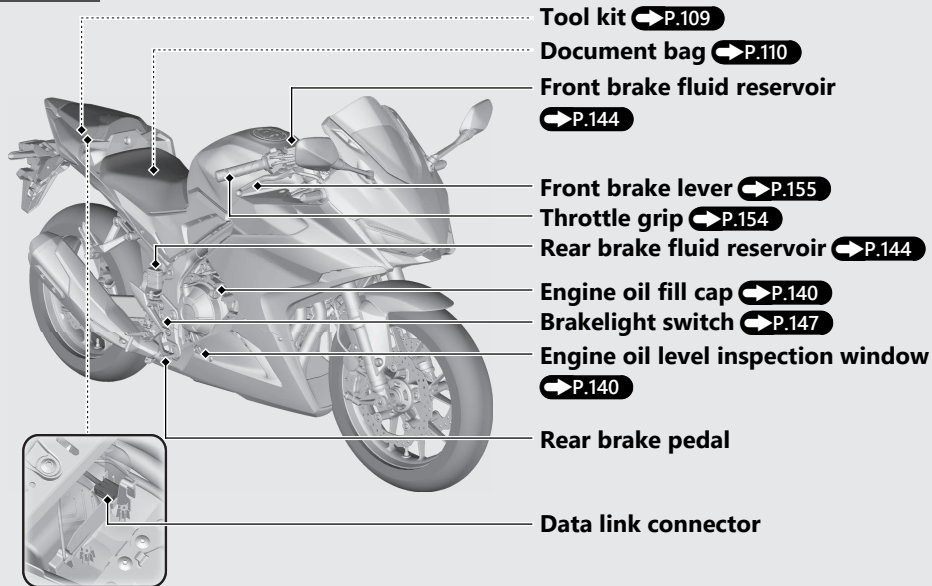CBR500RA

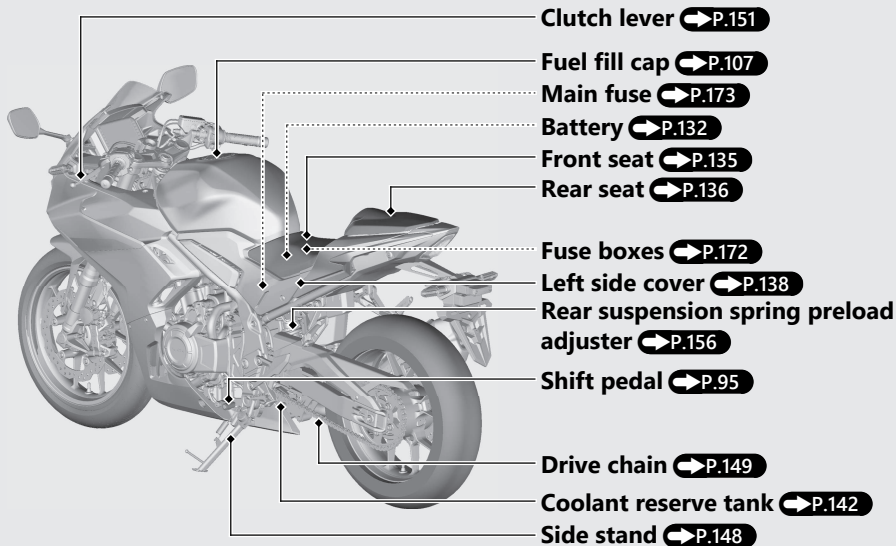


Parts Location *(Continued)*

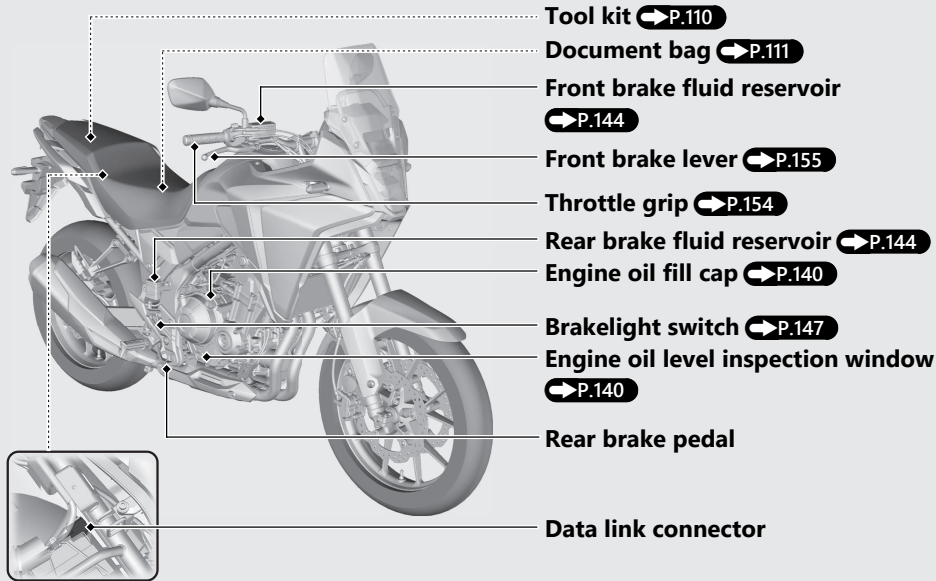
CB500XA

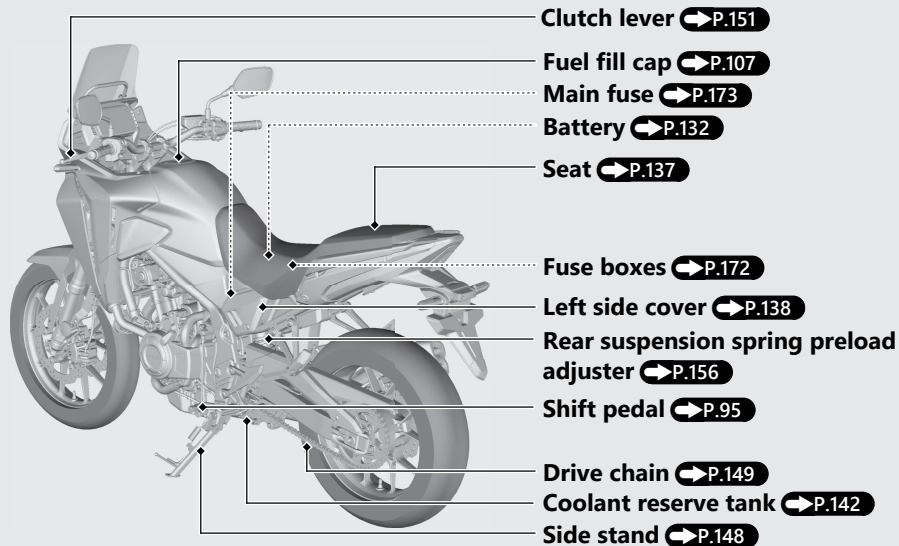


Parts Location *(Continued)*


CB500FAC

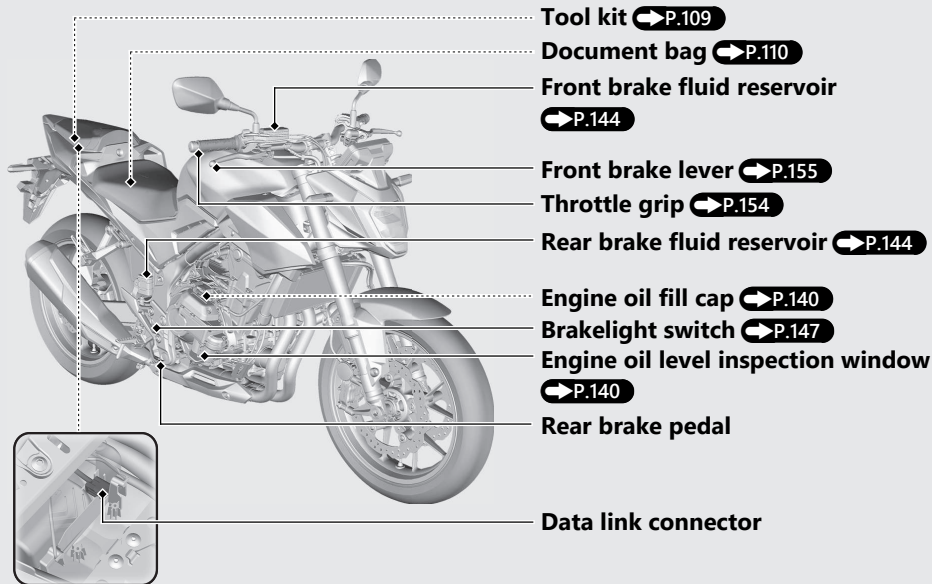

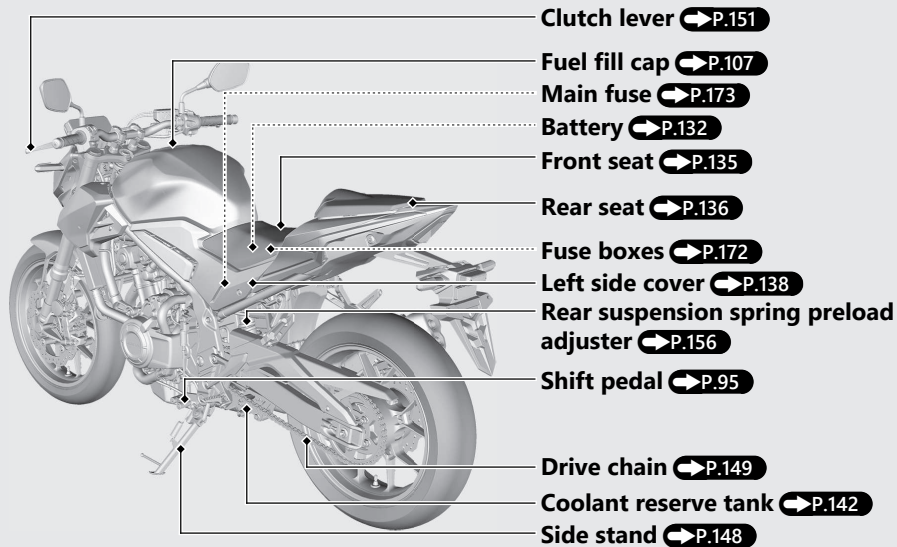


Parts Location *(Continued)*

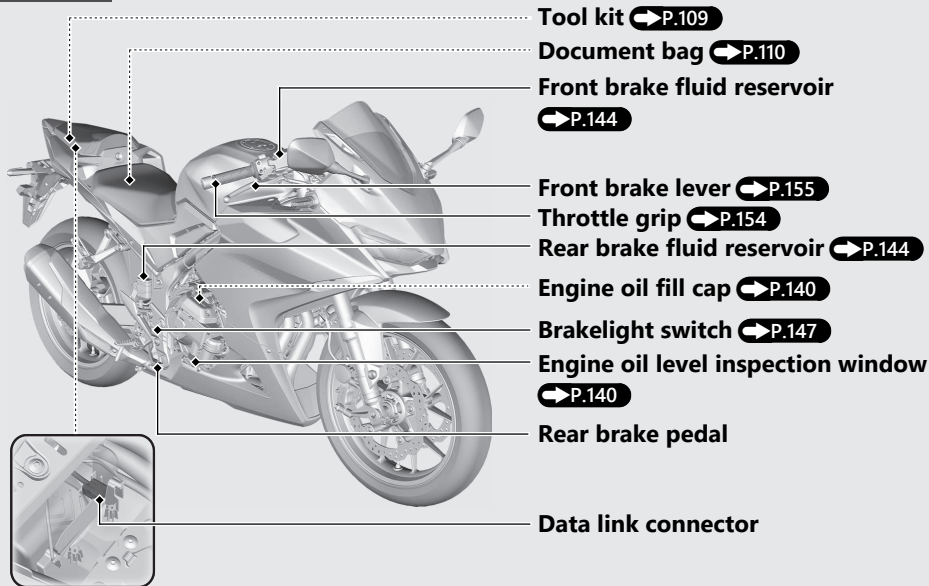
CBR500RAC

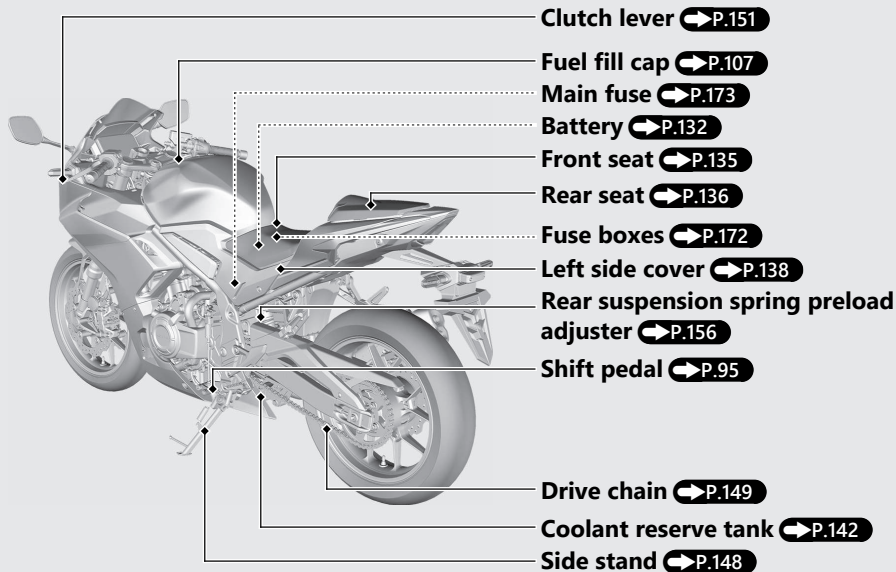

Parts Location (Continued)

CB500XAC

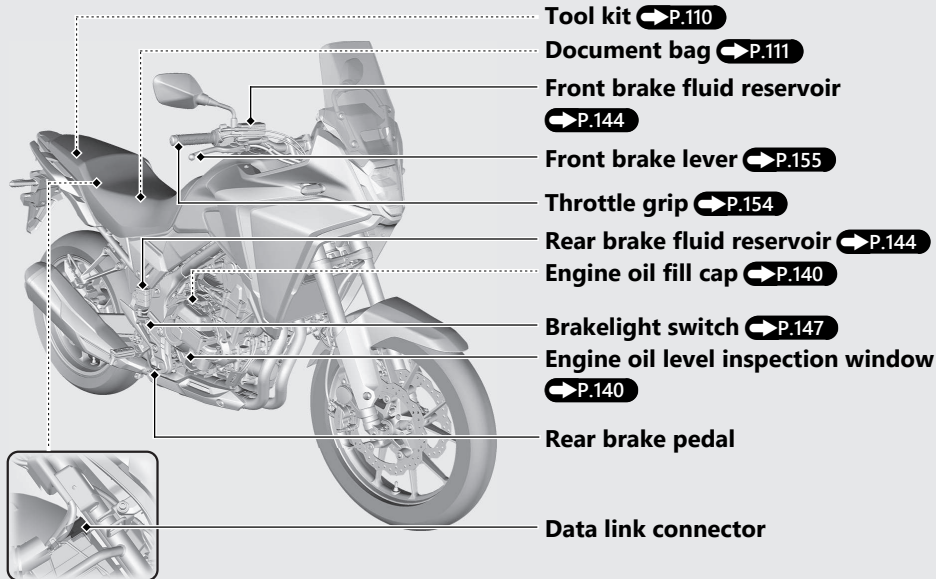


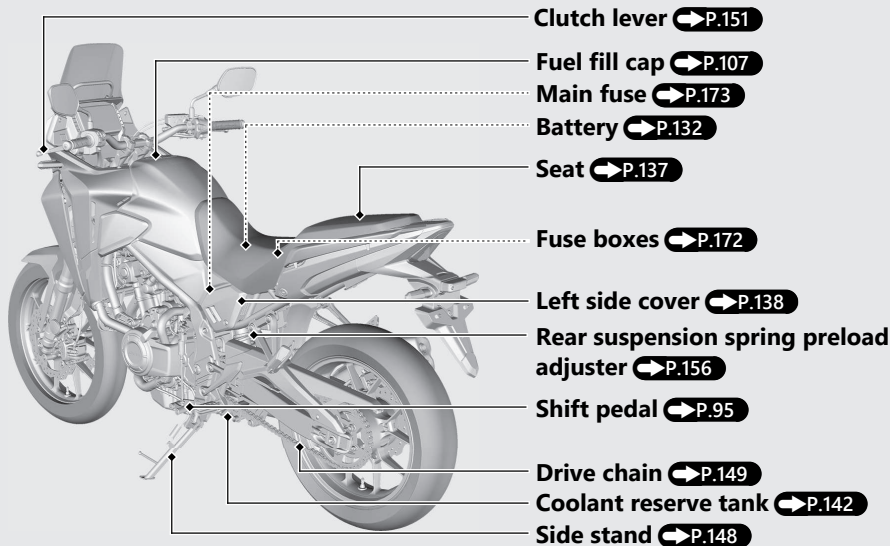

Instruments



Do not operate the display functions for a long time with the engine stopped. It may result in a low (or dead) battery.

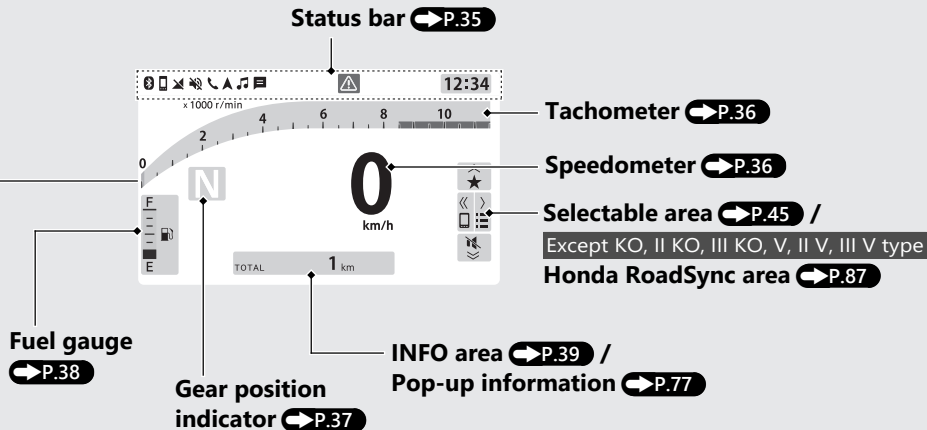

Instruments (Continued)

This meter has three display types.

The display and arrangement change depending on each display type.


Initial setting is BAR.

► Tachometer is available when display type is BAR or CIRCLE.

To change the display type: ➡P.50 ➡P.60

Display type: CIRCLE


Tachometer **Speedometer**

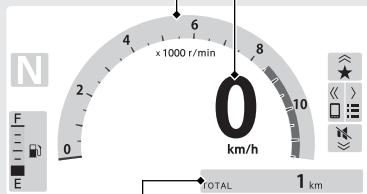

INFO area/Pop-up information


Display type: SIMPLE

Speedometer

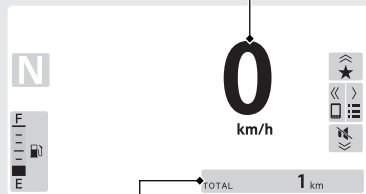

INFO area/Pop-up information

Status bar

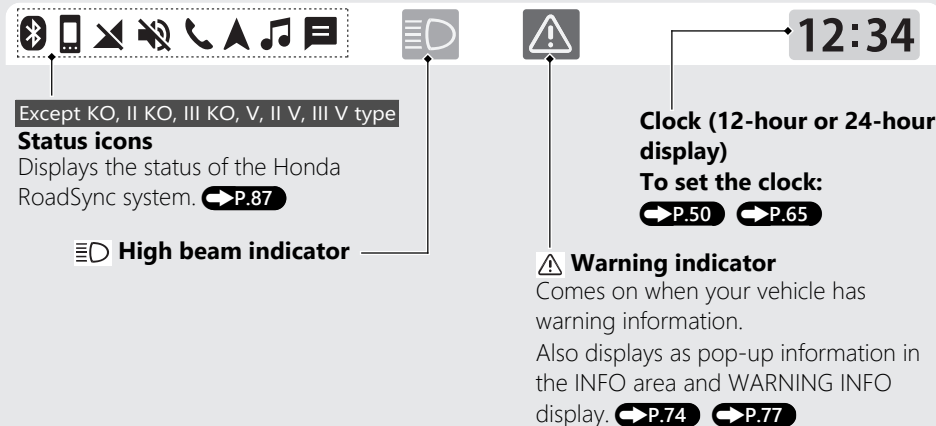

Instruments (Continued)

Speedometer/Tachometer/Fuel gauge

Display type: BAR

Tachometer

Tachometer is available when display type is BAR or CIRCLE.

The tachometer colour changes when the engine revolutions exceed the set value of SHIFT POINT.


You can turn on/off this function.

SHIFT POINT setting: ➡ P.57

DISPLAY TYPE setting: ➡ P.60

NOTICE

Do not operate the engine in the tachometer red zone.
Excessive engine speed can adversely affect engine life.

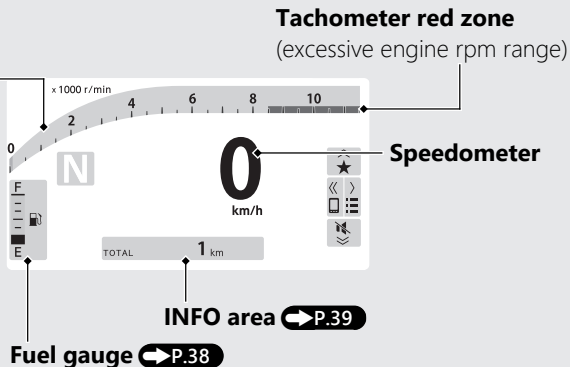


Gear position indicator

The gear position is shown in the gear position indicator.

- ▶ "-" appears when the transmission is not shifted properly.

Instruments *(Continued)*

Fuel gauge

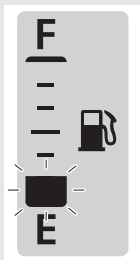

CB500XA/XAC

Remaining fuel when only 1st (E) segment starts flashing approximately:
2.8 L (0.74 US gal, 0.62 Imp gal)

CB500FA/FAC/CBR500RA/RAC

Remaining fuel when only 1st (E) segment starts flashing approximately:
3.2 L (0.85 US gal, 0.70 Imp gal)


If the fuel gauge indicator flashes in a repeat pattern or turns off: ➡ P.165


NOTICE

You should refuel when the reading approaches the 1st (E) segment. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

INFO area

Pressing the  or  of the  sel switch switches between the information display selected in the FAVORITE INFO setting.

FAVORITE INFO setting:  **P.62**

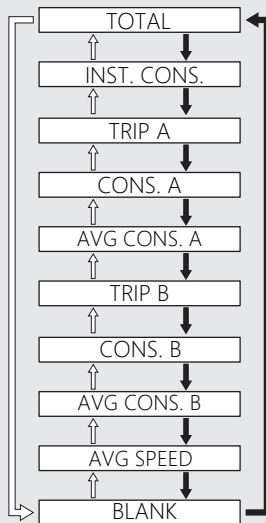

 Press the  of the sel  switch

 Press the  of the sel  switch

Instruments *(Continued)*


You can select from below items as display information.

If no item is selected, the INFO area is not displayed.

- Odometer [TOTAL]
- Current fuel mileage [INST. CONS.]
- Tripmeter A [TRIP A]
- Tripmeter A fuel consumption [CONS. A]
- Tripmeter A average fuel mileage [AVG CONS. A]
- Tripmeter B [TRIP B]
- Tripmeter B fuel consumption [CONS. B]
- Tripmeter B average fuel mileage [AVG CONS. B]
- Average speed [AVG SPEED]
- Blank display [BLANK]

Odometer [TOTAL]

Total distance ridden.

TOTAL **1** km 

 
When "-----" is displayed, go to your dealer for service.

■ **Current fuel mileage [INST. CONS.]**


Displays the current instant fuel mileage.

Display range: 0 to 4 L/100 km
 (0 to 40 km/L,
 0 to 100 mile/gal,
 or 0 to 25 mile/L)

- When your speed is less than 5 km/h (3 mph): zero segment is displayed.



Zero segment

 

When it is not displayed properly except for the above-mentioned case, go to your dealer for service.

Instruments *(Continued)*

■ Tripmeter [TRIP A/B]

Distance ridden since tripmeter was reset.

TRIP A **125.0** km  

TRIP B **250.0** km  

When "----.-" is displayed, go to your dealer for service.

To reset the tripmeter: ➡ P.48

■ Fuel consumption [CONS. A/B]

Displays the fuel consumption since the selected tripmeter was reset.

The fuel consumption will be calculated based on value of the tripmeter A or B.

Display range: 0.0 to 299.9 L (gal)

When the tripmeter A or B is reset: "0.0" is displayed.

CONS.A **4.3** L  

CONS.B **11.4** L  

When "----.-" is displayed, go to your dealer for service.

To reset the fuel consumption: ➡ P.48

Average fuel mileage

[AVG CONS. A/B]

Displays the average fuel mileage since the selected tripmeter was reset.

The average fuel mileage will be calculated based on value of the tripmeter A or B.

AVG CONS. A **3.0** L/100km  

AVG CONS. B **3.8** L/100km  

Display range: 0.0 to 299.9 L/100 km (km/L, mile/gal, or mile/L)

- Above 299.9 L/100 km : "---." is displayed.
- Less than 0.1 L/100 km : "0.0" is displayed.
- More than 299.9 km/L (mile/gal or mile/L): "299.9" is displayed.
- When the tripmeter A or B is reset: "---." is displayed.

When "---." is displayed except for the above-mentioned cases, go to your dealer for service.

To reset the average fuel mileage:

 **P.48**

Instruments *(Continued)*

Average speed [AVG SPEED]

Displays the average speed since when the engine starts.

Display range: 0 to 299 km/h (0 to 186 mph)

- Initial display: "---" is displayed.
- When your vehicle has travelled less than 0.2 km (0.12 mile) since the engine was started: "---" is displayed.
- When your vehicle operating time is less than about 15 seconds since the engine was started: "---" is displayed.

AVG SPEED **34** km/h 

When "---" is displayed except for the above-mentioned cases, go to your dealer for service.

Blank display

Displays the blank.

Selectable area

You can select the following:

- General menu ➡ **P.46**
- FAVORITE SWITCH (TRIP RESET mode)
Except KO, II KO, III KO, V, II V, III V type
- Honda RoadSync transition ➡ **P.87**
- Honda RoadSync mute

 
Selectable area

Except
KO, II KO, III KO,
V, II V, III V type


Honda RoadSync

Move to Honda RoadSync operation display.

FAVORITE SWITCH



General menu

 

Except KO, II KO, III KO,
V, II V, III V type

Honda RoadSync mute

Mute audio and sound.

➡ Press and hold the ▲ of the sel switch



➡ Press the ▶ of the sel switch






➡ Press and hold the ◀ of the sel switch


➡ Press and hold the ▼ of the sel switch

Instruments (Continued)



General Menu

Pressing the  of the  sel switch opens the general menu.

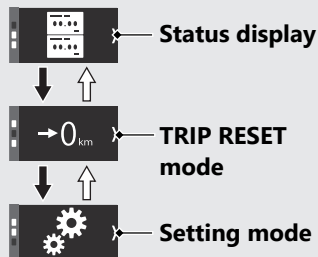Pressing the  or  of the sel  switch can select between the status display, TRIP RESET mode and setting mode and pressing the  of the sel  switch opens each display.



-  Press the  of the sel  switch
-  Press the  of the sel  switch

Pressing the  of the  sel switch closes the general menu.

Pressing none of switch for about 10 seconds also closes the general menu except when the status display is selected.

Status display


Display the information selected in the FAVORITE INFO setting.

Pressing the  or  of the sel  switch selects between the four pages.

► There are two items on pages 1 to 4.

The items that you can select as display information are the same as those in the INFO area.

FAVORITE INFO:  P.62

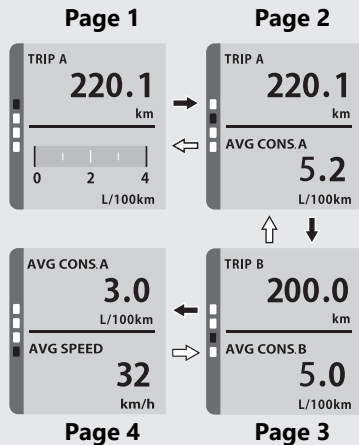




 Press the  of the sel  switch



 Press the  of the sel  switch

Instruments (Continued)

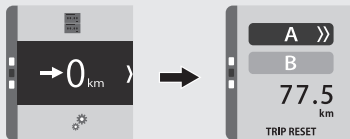

TRIP RESET mode

1. Select the TRIP RESET mode and press the  of the  sel switch. ➔ P.46




2. Select the tripmeter A or B using the  or  of the  sel switch.



3. Press and hold the  of the  sel switch.

► When the tripmeter A/B is reset, fuel consumption [CONS. A/B] and average fuel mileage [AVG CONS. A/B] based on each tripmeter are reset at the same time.

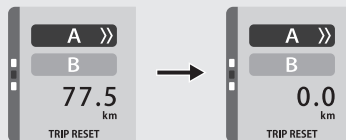


Also, the tripmeter A, tripmeter A fuel consumption, and tripmeter A average fuel mileage can be automatically reset when the fuel gauge increases over 2 segments after refuelling.


You can turn on or off this function.

TRIP A AUTO RESET: ➔ P.58

Setting mode

Press the  of the  sel switch to shift to setting mode.

► To shift to setting mode, stop the vehicle.

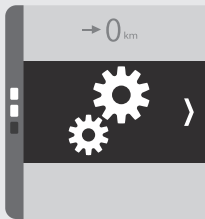



Setting mode:  **P.50**

Instruments (Continued)


Setting mode

To shift to the setting mode


Press the  of the  sel switch when the selectable area displays setting mode. ➡ P.46

- ▶ The clock, indicators, and speedometer are displayed at the top of the screen while the setting mode is displayed.



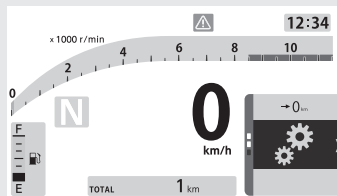

Ordinary display

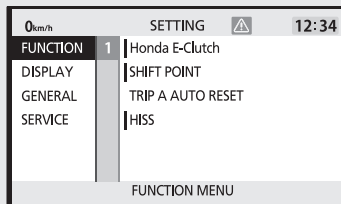


Setting mode



To return to the ordinary display


- Press the  of the  sel switch during selecting FUNCTION, DISPLAY, GENERAL, or SERVICE.
- Turn the ignition switch to the  (Off) position and to the  (On) position again.

Setting flow

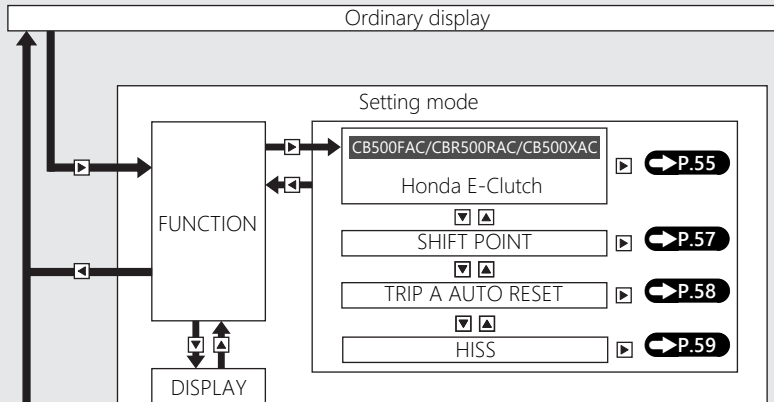


➡ Push/Press

Instruments *(Continued)*

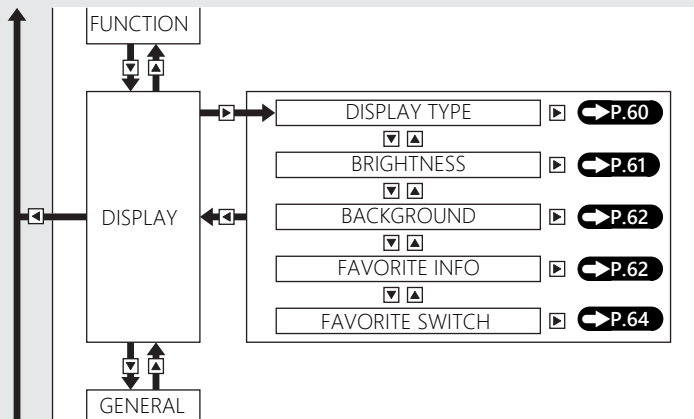


→ Push/Press

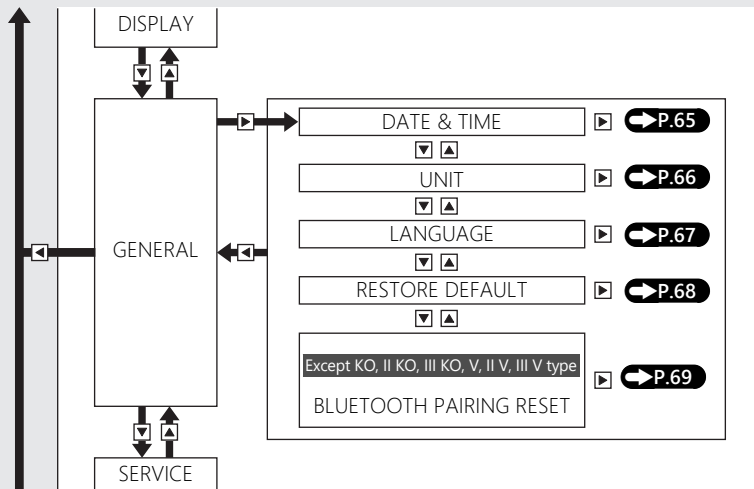

➡ **Push/Press**

Instruments (Continued)

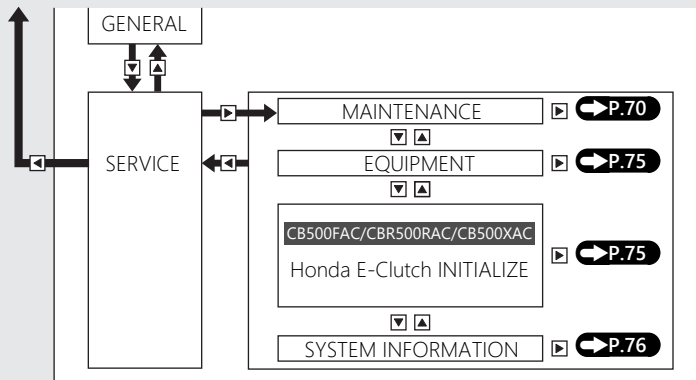

➡ **Push/Press**

Honda E-Clutch

CB500FAC/CBR500RAC/CB500XAC

You can change the following items about Honda E-Clutch.

| (On) / **○** (Off) : Turns Honda E-Clutch On or Off.


UP : Load level of the shift pedal for upshifting when Honda E-Clutch is on

DOWN : Load level of the shift pedal for downshifting when Honda E-Clutch is on

1 Shift the transmission to Neutral (**N**) indicator comes on).


► You cannot choose the Honda E-Clutch unless the transmission is in Neutral.

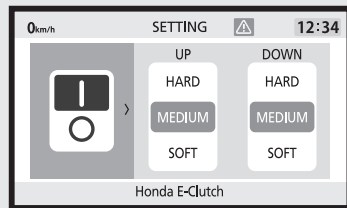

2 Select the **|** (On) or **○** (Off) using **▲** or **▼** of the **↔** sel switch.






Instruments (Continued)

3 To select **I** (On)

Press  of the  sel switch to select the UP or DOWN.

Select the desired setting (SOFT, MEDIUM or HARD) using  or  of the  sel switch.

Press  of the  sel switch to complete the setting.

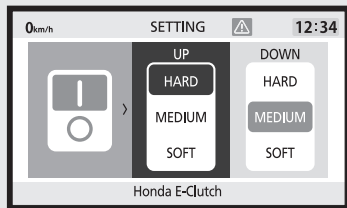


To select **O** (Off)

Press  of the  sel switch to confirm the setting.

SHIFT POINT


You can switch the shift up mode to the **|** (active) or **○** (inactive). ➔ P.36

- 1 Select the **|** (active) or **○** (inactive) using **▲** or **▼** of the **↔** sel switch.

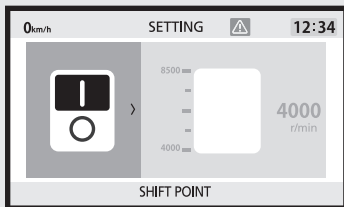

- 2 If you select the **|** (active), you can switch to the shift point value setting by pressing the **▶** of the **↔** sel switch.
- 3 Select the desired setting value using the **▲** or **▼** of the **↔** sel switch.

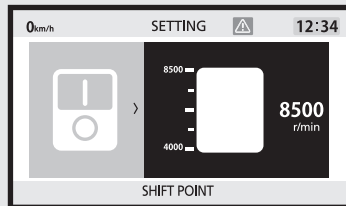

Setting range:
4000 to 8,500 r/min










- 4 Press the **◀** of the **↔** sel switch to confirm the setting.


Instruments *(Continued)*

TRIP A AUTO RESET

You can switch the tripmeter A automatic reset mode to the  (active) or  (inactive).





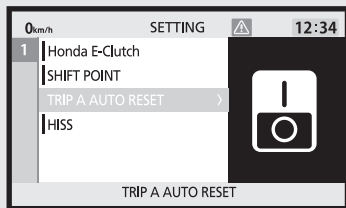


 **P.48**


- 1 Select the  (active) or  (inactive) using the  or  of the  sel switch.
- 2 Press the  of the  sel switch to confirm the setting.



HISS

You can select the blink or off the HISS indicator.

- 1 Select the  (active) or  (inactive) using the  or  of the  sel switch.
- 2 Press the  of the  sel switch to confirm the setting.

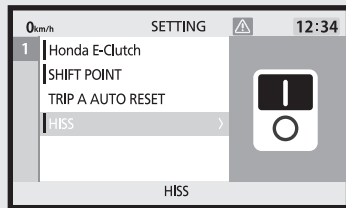


Instruments (Continued)

DISPLAY TYPE

You can change the display type. ➡ P.34

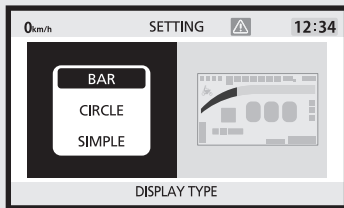


- 1 Select the display type ("BAR", "CIRCLE" or "SIMPLE") using ▲ or ▼ of the ◀▶ sel switch.
- 2 Press ◀ of the ◀▶ sel switch to confirm the setting.









BRIGHTNESS


You can adjust the backlight brightness to one of the eight levels or select the auto adjustment.

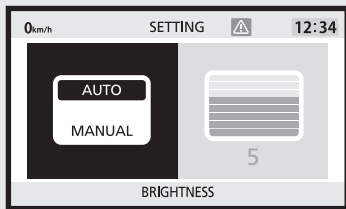
Automatic brightness control: ➡ P.181

- 1 Select the "AUTO" or "MANUAL" using  or  of the  sel switch.



- 2 If you select "MANUAL," you can switch to the backlight brightness setting by pressing the  of the  sel switch.
- 3 Select the backlight brightness using the  or  of the  sel switch.

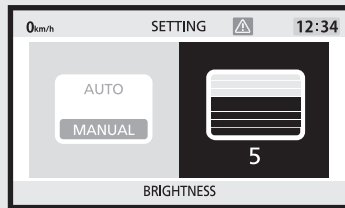



- 4 Press the  of the  sel switch to confirm the setting.


Instruments (Continued)

BACKGROUND

You can change the setting of the background colour to "WHITE," "BLACK," or "AUTO" adjustment.

Automatic brightness control: ➡ P.181

- 1 Select the background colour using the ▲ or ▼ of the  sel switch.
- 2 Press the ◀ of the  sel switch to confirm the setting.

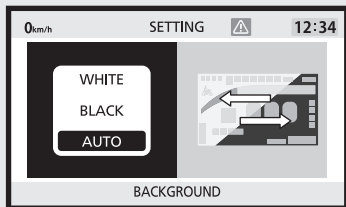




FAVORITE INFO




You can change the information items displayed in the INFO area and the status display in the selectable area.


➡ P.39 ➡ P.47

INFO area

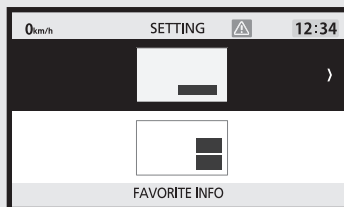

- 1 Select the INFO area using the ▲ or ▼ of the  sel switch and press the ▶ of the sel  button.



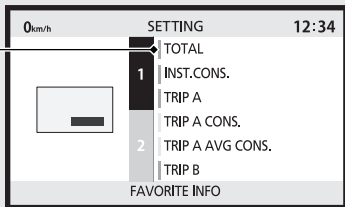


- 2 Select the item using the ▲ or ▼ of the  sel switch.
- 3 Pressing the  of the  sel switch can switch if the item is displayed or not.
 - ▶ When the bar turns to green, the item is displayed in INFO area.




 
 
 
Bar


- 4 Press the  of the  sel switch to confirm the setting.

Status display

- 1 Select the status display using the ▲ or ▼ of the  sel switch and press the  of the sel  button.

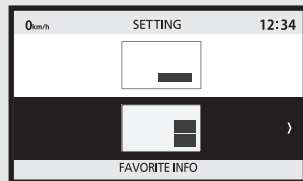



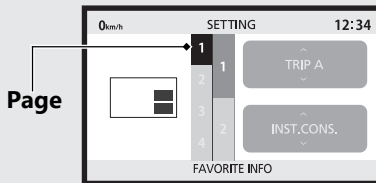
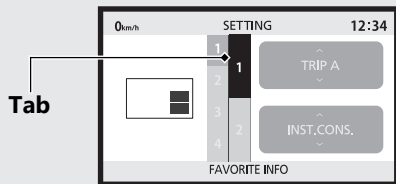
- 2 Select the page of the status display using the ▲ or ▼ of the  sel switch and press the  of the sel  button.




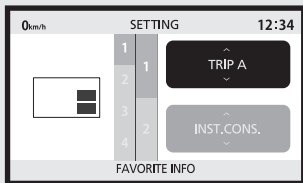
Page


Instruments (Continued)

- 3 Select the tab of the status display using the ▲ or ▼ of the  sel switch and press the  of the sel  button.



- 4 Select the item using the ▲ or ▼ of the  sel switch.






- 5 Press the  of the  sel switch to confirm the setting.


FAVORITE SWITCH

"FAVORITE SWITCH" is displayed but not selectable.



DATE & TIME

- 1 Select the day, month, year, hour, minute, "24 / 12", and "AM / PM" using the ◀ or ▶ of the sel  switch.
- 2 Select the desired setting using the ▲ or ▼ of the  sel switch.
▶ "AM / PM" is available when you select 12-hour indication.
- 3 Press the ◀ of the  sel switch to confirm the setting.

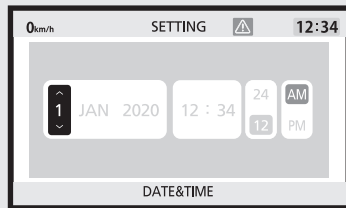



Instruments (Continued)

UNIT


You can change the speed and mileage, and fuel mileage meter units.

1 ED, II ED, III ED, KO, II KO, III KO, LA, II LA type

Select the "SPEED" or "FUEL CONS." using  or  on the sel switch.

▶ "TEMP." is displayed but not selectable.


Except ED, II ED, III ED, KO, II KO, III KO, LA, II LA type

Select the "FUEL CONS." using  or  on the sel switch.


▶ "SPEED" and "TEMP." are displayed but not selectable.

2 Select the desired setting using or on the sel switch.

3 Return to the ordinary display to complete the setting. ➡ P.50

To continue setting, press  on the sel switch to return to the upper hierarchy.

▶ The set value is retained.

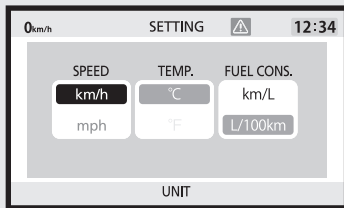

ED, II ED, III ED, KO, II KO, III KO, LA, II LA type






If you want to select "L/100km" or "km/L" for fuel consumption, "km/h" must be selected in the "SPEED" menu in advance.


When "mph" for speed is selected, "mile/gal" or "mile/L" can be selected.

▶ "gal" is for UK only.

LANGUAGE



You can change the system language.

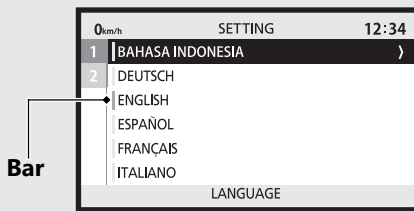
- 1 Select the language using the ▲ or ▼ of the  sel switch.
- 2 Press the  of the  sel switch to change the language.
 - ▶ When language is changed, the bar changes to green
- 3 Press the  of the  sel switch to confirm the setting.



Instruments (Continued)

RESTORE DEFAULT

Pressing and holding the  of the  sel switch can return the set values to default settings.

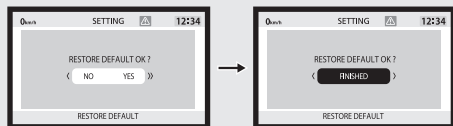

The following items are restored to their default values:

- Honda E-Clutch
- SHIFT POINT
- TRIP A AUTO RESET
- HISS
- DISPLAY TYPE
- BRIGHTNESS
- BACKGROUND
- FAVORITE INFO
- FAVORITE SWITCH
- UNIT
- LANGUAGE

BLUETOOTH PAIRING RESET

Except KO, II KO, III KO, V, II V, III V type



 


You can reset the pairing record of *Bluetooth*®.

Reset a *Bluetooth*® pairing record after stopping at a safe place.



To connect the device ➡ P.90

Make sure smartphone that you want to delete connection is connected to your vehicle.


To check if the smartphone is connected: ➡ P.35

- 1 Select the "NO" (not reset) or "YES"(reset) using the  or  of the  sel switch.
- 2 **When the "NO" is selected**
Press the  of the  sel switch. The pairing record is maintained, and then the display returns to the upper level hierarchy.

When the "YES" is selected

Press and hold the  of the  sel switch. Your smartphone connection is deleted and the pairing record is reset.

▶ When reset is complete, "FINISHED" will be displayed.

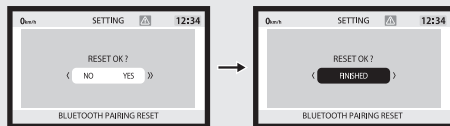



- ▶ If the pairing information remains in your smartphone even if the pairing information is deleted from the vehicle, the smartphone may be connected to the vehicle again.

Instruments (Continued)

MAINTENANCE

You can select the following:

- PERIODIC MAINTENANCE ➡ P.71
- OIL CHANGE ➡ P.72
- BATTERY VOLTAGE ➡ P.73
- WATER TEMP ➡ P.74
- WARNING INFO ➡ P.74

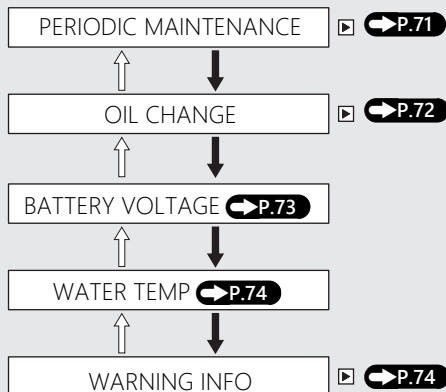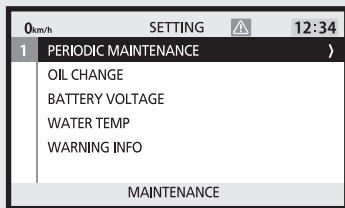

➡ Press ▼ of the sel switch.


➡ Press ▲ of the sel switch.

▶ Press the ▶ of the sel switch.

PERIODIC MAINTENANCE

You can check the next periodic inspection time.

You can change the setting of the next periodic inspection.

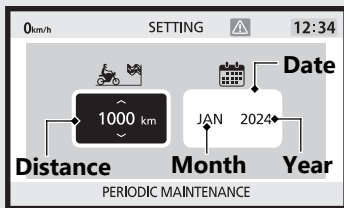

Display range:

Distance:

-----, 12,000 to -99,999 km
(8,000 to -99,999 mile)

► "mile" is for ED, II ED, III ED, KO, II KO,
III KO, LA, II LA type only.

Date:

Month: ---, JAN to DEC

Year: ----, 2020 to 2099

Setting range:

Distance:

-----, 100 to 12,000 km
(100 to 8,000 mile)

Initial setting:-----

Date:

Month: ---, JAN to DEC

Year: ----, 2020 to 2099

Initial setting

Month: ---

Year: ----


Maintenance information (➡P.77) will not be displayed if the distance and date are set to the initial settings.

Instruments (Continued)

OIL CHANGE

You can check the next engine oil change timing.

You can change the setting of the next engine oil change timing.

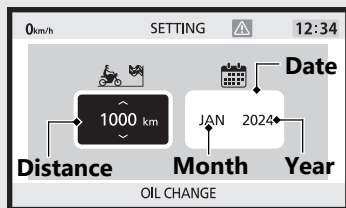

Display range:

Distance:

-----, 12,000 to -99,999 km
(8,000 to -99,999 mile)

► "mile" is for ED, II ED, III ED, KO, II KO, III KO, LA, II LA type only.

Date:

Month: ---, JAN to DEC

Year: ----, 2020 to 2099

Setting range:

Distance:

-----, 100 to 12,000 km
(100 to 8,000 mile)

Initial setting:-----

Date:

Month: ---, JAN to DEC

Year: ----, 2020 to 2099

Initial setting

Month: ---


Year: ----

Maintenance information (➡P.77) will not be displayed if the distance and date are set to the initial settings.

The pop-up information appears in the ordinary display when it reaches either of the following. ➡ **P.77**

- "500 km" ("300 mile") from the next periodic inspection.
- "100 km" ("60 mile") from the next engine oil change.
- One month before the set month.


Periodic inspection

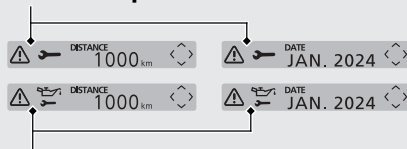

Oil change information

BATTERY VOLTAGE

Displays the current voltage.

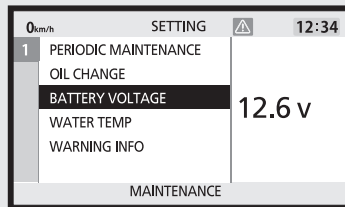

Instruments (Continued)

WATER TEMP


Displays the current coolant temperature.

- Below 34 °C: "----" is displayed.
- Between 122 °C and 131 °C: current coolant temperature flashes.
- Above 132 °C: "132" flashes.

Warning indicator and high coolant temperature indicator turn on and pop-up information appears when coolant temperature is above 122 °C.

➡ P.35 ➡ P.77

Overheating: ➡ P.159

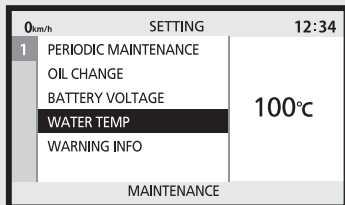


WARNING INFO

Displays each warning information and maintenance information.

- ▶ If there is no warning information to display, it displays nothing.
- ▶ If there is a warning information, see your dealer for service.

Warning information

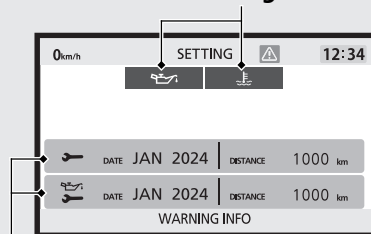


Maintenance information

EQUIPMENT

Except CBR500RA TH, III TH/
CB500FAC PH, II PH, V, II V/
CBR500RAC TH, III TH, III PH, III V/
CB500XAC II PH, V, II V type


"EQUIPMENT" is displayed but not selectable.

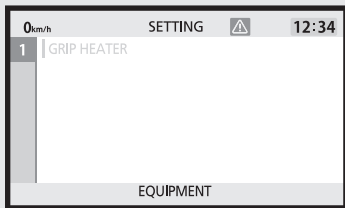

Honda E-Clutch INITIALIZE

CB500FAC/CBR500RAC/CB500XAC


"Honda E-Clutch INITIALIZE" is displayed but not selectable.

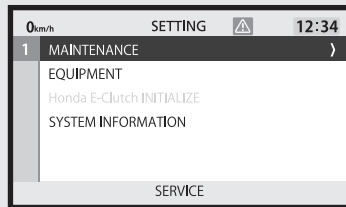

Instruments *(Continued)*

SYSTEM INFORMATION

Displays the software version and hardware information.

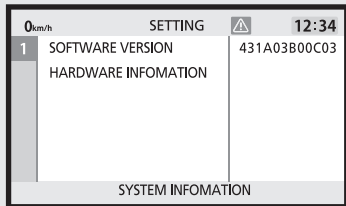


Pop-up information













In the following cases, pop-up information is displayed at the INFO area.

- Maintenance information:
When the inspection timing of your vehicle is approaching.
- Warning indicator:
When malfunction is detected.

When your vehicle has multiple pieces of information, pop-up information display appears alternately.




Pushing any of the  sel switch can hide the pop-up information.

Maintenance Information

Indication	Explanation	Remedy
  DISTANCE 1000 km 	When the periodic inspection time of your vehicle is approaching.	Have your vehicle inspected by your dealer.
  DATE JAN 2024 		
  DISTANCE 1000 km 	When the oil change time of your vehicle is approaching.	Change the engine oil.
  DATE JAN 2024 		

Instruments *(Continued)*


Warning Information

Indication	Explanation	Remedy
	Low oil pressure indicator	If it comes on while riding: ➡P.160
	High coolant temperature indicator	If it comes on while riding: ➡P.159
CB500FAC/CBR500RAC/CB500XAC 	When the Honda E-Clutch is not working correctly.	If it comes on while riding: ➡P.164

Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

Refer to the "Instruments" about indicators appeared on the display: ➡P.35 , ➡P.78

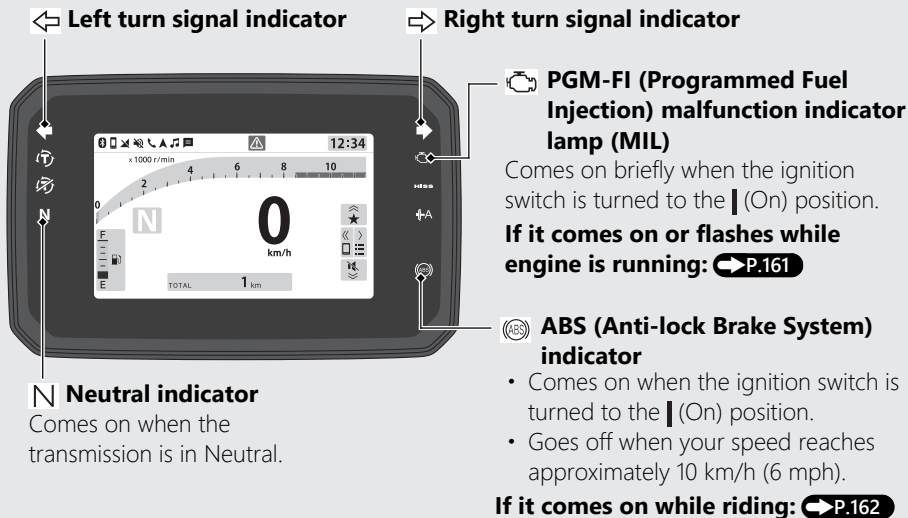

Indicators (Continued)

Torque Control indicator

- Comes on when the ignition switch is turned to the **I** (On) position. Goes off when your speed reaches approximately 5 km/h (3 mph) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

If it comes on while riding: ➡ **P.163**

HISS indicator ➡ **P.158**

- Comes on briefly when the ignition switch is turned to the **I** (On) position.
- Flashes every 2 seconds for 24 hours when the ignition switch is turned to the **O** (Off) position.

Auto clutch control indicator

➡ **P.97**

Comes on when the Honda E-Clutch function is on.


Torque Control OFF Indicator

Comes on when the Torque Control is turned Off.




Switches

CB500FA/FAC

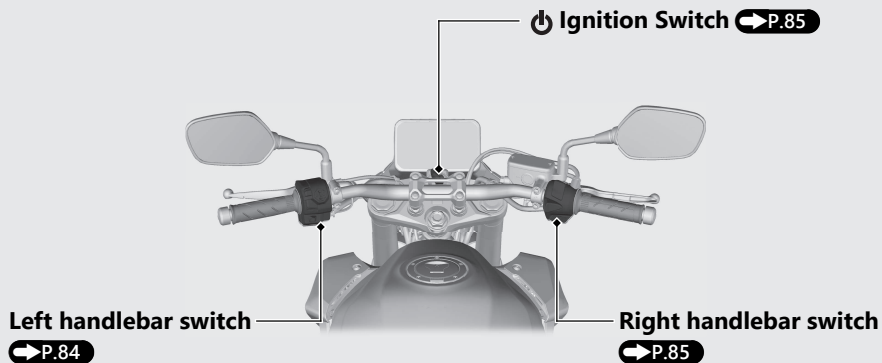


Switches *(Continued)*

CBR500RA/RAC

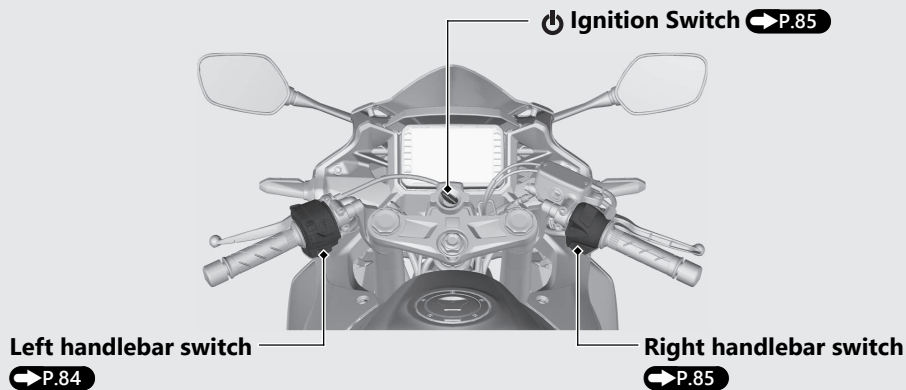


CB500XA/XAC

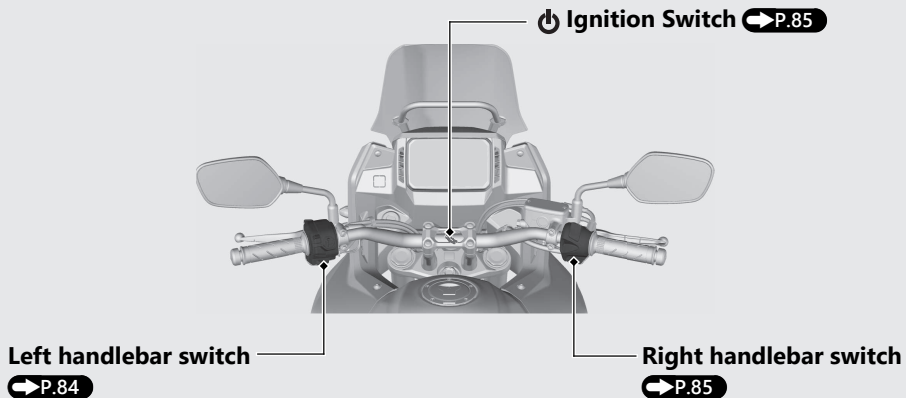

Switches (Continued)

Left handlebar switches

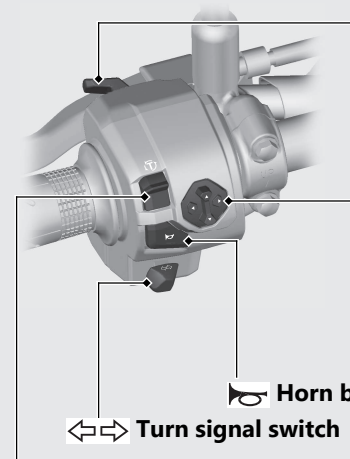

Headlight dimmer/Passing light control switch

- : High beam
- : Low beam
- **PASS** : Flashes the high beam headlight.

Sel switch

Used to operate and set the display.

➡ P.50

Except KO, II KO, III KO, V, II V, III V type

Also used to operate the Honda RoadSync. ➡ P.87

Horn button


Turn signal switch

Torque Control switch


Torque Control on/off.


➡ P.92

Right handlebar switches

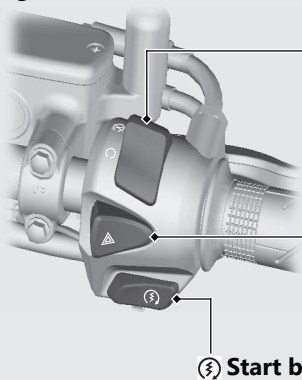


Engine stop switch

Should normally remain in the  (Run) position.

- In an emergency, switch to the  (Stop) position (the starter motor will not operate) to stop the engine.



Hazard switch

Switchable when the ignition switch is in the  (On) position.

Start button

Ignition Switch

Switches the electrical system on/off, locks the steering.

- Key can be removed when in the  (Off) or  (Lock) position.

(On)

 
Turns electrical system on for starting/riding.

(Off)

Turns engine off.

(Lock)

Locks steering.




Switches *(Continued)*


Steering Lock

Lock the steering when parking to help prevent theft.


A U-shaped wheel lock or similar device is also recommended.

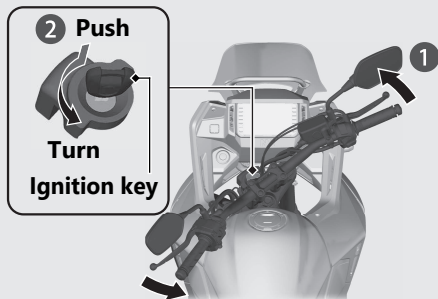

Locking

- 1 Turn the handlebar all the way to the left.
- 2 Push the key down, and turn the ignition switch to the  (Lock) position.
 - Jiggle the handlebar if the lock is difficult to engage.
- 3 Remove the key.

Unlocking

Insert the key, push it in, and turn the ignition switch to the  (Off) position.

Honda RoadSync

Except KO, II KO, III KO, V, II V, III V type

Connecting your smartphone with the vehicle and a *Bluetooth*® headset via *Bluetooth*® allows you to operate the smartphone by voice input from the headset. You can also use the system by operating switches on the handlebar.

- To use the system, you need to install the dedicated application on your smartphone beforehand and pair your smartphone with the vehicle and the headset.

For terms of service and information on how to install/operate the dedicated application, see the following URL:

<https://global.honda/voice-control-system/>



- The dedicated application is not available in some regions/countries. For available countries, see the above URL.

Honda RoadSync (Continued)

Communication range:

Within 1 meters radius from vehicle

Supported *Bluetooth*® version/profiles

<i>Bluetooth</i> ® version	Bluetooth 4.2 or higher
<i>Bluetooth</i> ® profiles	GATT (Generic Attribute Profile)
	HOGP (HID over GATT Profile)

Bluetooth® Wireless Technology

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motors Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

- Costs of network communication and communication equipment necessary for the use of this feature shall be borne by the user.
- You cannot pair two or more smartphones at once.
- Some smartphones may not be compatible with the feature.
- We shall not be liable for any damages or trouble in the use of smartphones.
- When unable to connect your smartphone to the vehicle, change the storage location of the smartphone.

The system itself has certain limitations. Therefore, you must verify the voice guidance and information in the meter provided by the system by carefully observing the roadway, signs, and signals, etc. If you are unsure, proceed with caution. Always use your own good judgement, and obey traffic laws while riding.

⚠ WARNING

Using Honda RoadSync while riding can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

- Be especially cautious when crossing intersections, in heavy traffic, etc.
- Carefully observe the roadway, signs, and signals.
- Obey traffic laws while riding.

Honda RoadSync Limitations

Changes in operating systems, hardware, software, and other technology integral to providing Honda RoadSync functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Honda RoadSync functionality and services.

Honda cannot and does not provide any warranty or guarantee of future Honda RoadSync performance or functionality.



Honda RoadSync (Continued)


Pairing your smartphone via Bluetooth®

Make a *Bluetooth*® pairing after stopping at a safe place.


Only one smartphone can be connected at the same time.

To connect other smartphone, reset the *Bluetooth*® pairing record. ➡ P.69


- 1 Select the BLUETOOTH PAIRING RESET menu. ➡ P.50 ➡ P.69
- 2 Press and hold the  on the sel switch to select "YES."
- ▶ Press  on the sel switch to cancel the pairing. The display returns to the upper level hierarchy.

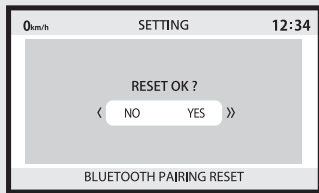

- ③ "PROCEEDING..." is displayed and the system will be in pairing standby. Perform the pairing operation by the application on your smartphone within about 2 minutes.

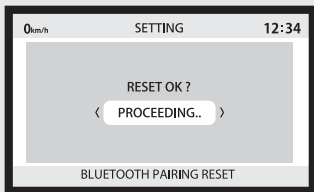

 
- On the ordinary display, the *Bluetooth*® indicator is flashing while waiting for pairing.



**Bluetooth®
indicator**

- For operation of the application, follow the instruction of the application.

- ④ When pairing is complete, "FINISHED" will be displayed.
- Even if you do not complete, "FINISHED" will be displayed about 2 minutes after. Check the status icons to confirm pairing is complete. ➡ **P.35**
- If pairing is not completed, perform ① to ③ again.

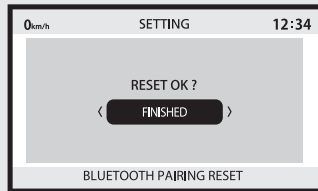

Honda Selectable Torque Control


Torque Control (engine power control) can be turned on/off.

- ▶ Do not operate the Torque Control switch while riding.
Stop the vehicle first and turn the Torque Control off or on.
- ▶ The Torque Control cannot be turned off when the system is activated (Torque Control indicator flashing).
- ▶ Each time the ignition switch is turned to the **I** (On) position, the Torque Control will automatically be set to on.

Torque Control on and off

Torque Control can be turned on and off by pressing and holding the Torque Control switch.


Torque Control switch

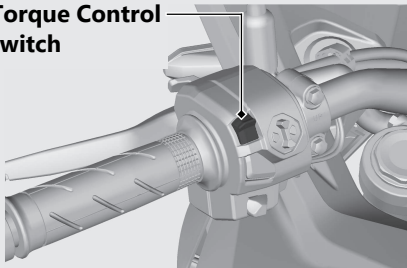


Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.


CB500FA/FAC

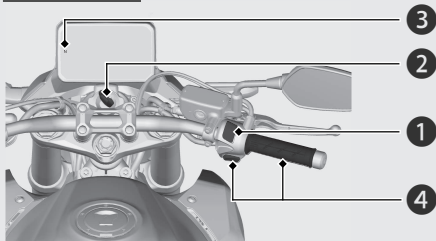


CBR500RA/RAC

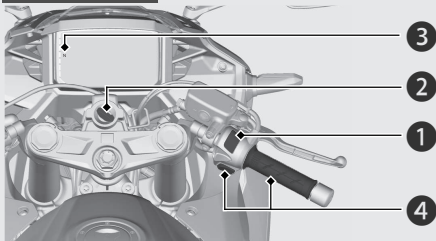

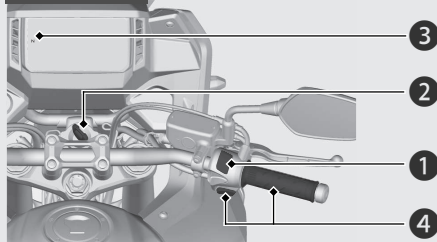

CB500XA/XAC



NOTICE


- If the engine does not start within 5 seconds, turn the ignition switch to the  (Off) position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine and the exhaust system.
- Snapping the throttle or fast idling for more than about 5 minutes may cause exhaust pipe discolouration.

- 1 Make sure the engine stop switch is in the  (Run) position.
- 2 Turn the ignition switch to the  (On) position.

Starting the Engine *(Continued)*

- ③ Shift the transmission to Neutral (N indicator comes on). Alternatively, pull in the clutch lever to start your vehicle with the transmission in gear so long as the side stand is raised.
- ④ Press the start button with the throttle completely closed.
 - ▶ If you cannot start the engine, open the throttle slightly (about 3 mm (0.1 in), without freeplay) and press the start button.

About 3 mm (0.1 in), without freeplay

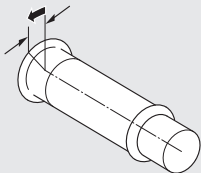

If the engine does not start:

- ① Open the throttle fully and press the start button for 5 seconds.
 - ▶ The engine will not start at this time. (When the throttle is fully open, the engine will not start when the start button is pressed.) Release the throttle and start button after 5 seconds and proceed to step ②.
- ② Repeat the normal starting procedure.
- ③ If the engine starts, open the throttle slightly if idling is unstable.
- ④ If the engine does not start, wait 10 seconds before trying steps ① & ② again.

If Engine Will Not Start ➡ P.158


Shifting Gears

Your vehicle transmission has 6 forward gears in a one-down, five-up shift pattern.

CB500FAC/CBR500RAC/CB500XAC

Your vehicle also has Honda E-Clutch; you can start, stop, and change gears without clutch lever operation. 📖 P. 96

If you put the vehicle in gear with the side stand down, the engine will shut off.

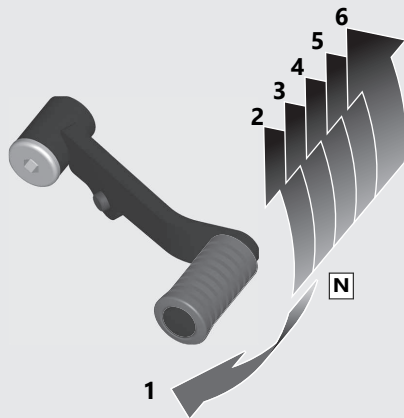

Honda E-Clutch

CB500FAC/CBR500RAC/CB500XAC

Honda E-Clutch allows you to start, stop, and change gears without clutch lever operation.

- ▶ When the vehicle is in gear (gear position number is displayed) without clutch lever operation, be careful not to open the throttle when pushing or pulling the vehicle back and forth or when turning the handlebar while stationary or at low speeds. If you do so, you may cause the vehicle to unexpectedly and strongly surge forward and lose control.
- ▶ Honda E-Clutch function can be turned off from meter setting.
- ▶ If you operate the clutch lever while Honda E-Clutch function is on, Honda E-Clutch function will deactivate temporarily with auto clutch control indicator turning off. When vehicle is stopped, shift to Neutral (or you can start with clutch lever operation). When vehicle is running, wait a few seconds for Honda E-Clutch to reactivate.

- ▶ Each time the ignition switch is turned to the **I** (On) position, the Honda E-Clutch function will be turned on automatically.
 - ▶ Clutch lever freeplay will increase after ignition switch is turned to the **I** (On) position with gear position in Neutral, or when the engine is running. This is normal.
 - ▶ If the PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL) comes on, the Honda E-Clutch function may be turned off.
 - ▶ Always use the recommended tyres and sprockets to ensure correct Honda E-Clutch operation.
 - ▶ If clutch lever freeplay is improperly adjusted, the Honda E-Clutch may not work.
- Auto clutch control indicator ➡ P. 97
 - Starting ➡ P. 98
 - Upshifting ➡ P. 100
 - Downshifting ➡ P. 100
 - Stopping ➡ P. 101
 - Information from the gear position indicator ➡ P. 102

Auto clutch control indicator

Comes on when the Honda E-Clutch function is ready to use and when in use.

When the auto clutch control indicator does not come on, Honda E-Clutch cannot be used.

- You must use the manual clutch lever to operate the vehicle.



Auto clutch control indicator

Honda E-Clutch (Continued)

Starting


1. Start the engine. P. 93
 ► If you start the engine in gear, push the start button with the clutch lever pulled. After engine starts, Honda E-Clutch function is deactivated temporarily. Accelerate from a stopped position with clutch lever operation, or shift to Neutral to activate the Honda E-Clutch.
2. Check that the transmission is in Neutral (indicator comes on).
3. Make sure the auto clutch control indicator comes on.
4. Shift the transmission to 1st gear without clutch lever operation.



5. Open the throttle gradually and the vehicle will start moving forward.

If you start the vehicle with transmission in 2nd or higher gear, the gear position indicator will inform you the transmission is in high gear position by displaying the downshift symbol and a blinking indicator.

- You can shift down by simply pushing down the shift pedal.

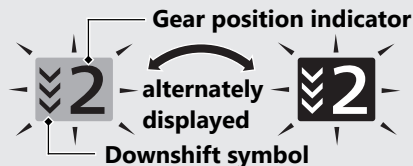


NOTICE

To prevent rapid clutch wear, always accelerate from a stopped position with the transmission in 1st gear.

If wear progresses, the Honda E-Clutch function may turn off.

When the clutch lever is operated

If you shift the transmission to 1st gear with clutch lever operation, Honda E- Clutch is deactivated temporarily, auto clutch control indicator is turned off.

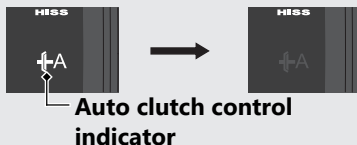


You can accelerate from a stopped position using throttle grip and clutch lever operation as with a manual transmission in this situation.

To activate the Honda E-Clutch system again, shift the transmission to Neutral and make sure that auto clutch control indicator comes on. Then shift the transmission to 1st gear without clutch lever operation.

When the Honda E-Clutch function is on, if you operate the throttle grip and use the clutch lever to start riding the vehicle, the function will be temporarily deactivated. However, the function will automatically reactivate a few seconds after you start riding the vehicle.

When the Honda E-Clutch function is turned off

You need to operate the clutch lever to accelerate from a stopped position if the Honda E-Clutch function is off (auto clutch control indicator turns off and "M" symbol is displayed in the gear position indicator  P. 102).

Honda E-Clutch *(Continued)*

Upshifting

Pull up the shift pedal without closing the throttle and operating the clutch lever.

When the clutch lever is operated

If you operate the clutch lever to shift up while the Honda E-Clutch function is on, the function will temporarily deactivate, but it will automatically reactivate in a few seconds.

When the Honda E-Clutch function is turned off

You need to close the throttle and operate the clutch lever while upshifting if the Honda E-Clutch function is off (auto clutch control indicator turns off and "M" symbol is displayed in the gear position indicator ➡ P. 102).

Downshifting

Push down the shift pedal without clutch lever operation.

When the clutch lever is operated


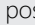 
If you operate the clutch lever to shift down while the Honda E-Clutch function is on, the function will temporarily deactivate, but it will automatically reactivate in a few seconds.

When the Honda E-Clutch function is turned off

You need to operate the clutch lever while downshifting if the Honda E-Clutch function is off (auto clutch control indicator turns off and "M" symbol is displayed in the gear position indicator ➡ P. 102).


Stopping

Close the throttle and apply the brake without clutch lever operation to stop the vehicle.

If the gear position is not in Neutral when the ignition switch is turned to the  (Off) position, grip the clutch lever or put the gear in Neutral to move the vehicle. If the gear position is not in Neutral when the ignition switch is turned to the  (Off) position, the Honda E-Clutch function will not turn on and the clutch is engaged.

If you stop the vehicle with transmission in 2nd or higher gear, the gear position indicator will inform you the transmission is in high gear position by displaying the downshift symbol and a blinking indicator.


- You can shift down by simply pushing down the shift pedal.

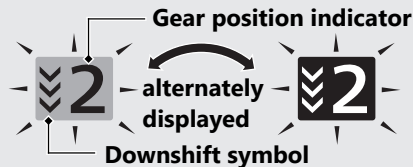

NOTICE

To prevent clutch damage, do not use the throttle to keep the vehicle stopped uphill.

When the Honda E-Clutch function is turned off

You need to operate the clutch lever to stop the vehicle if the Honda E-Clutch function is off (auto clutch control indicator turns off and "M" is displayed in the gear position indicator  P. 102).

Honda E-Clutch *(Continued)*


Information from the gear position indicator

Gear position indicator will inform you the information on following situations.

Downshift symbol is displayed and gear position indicator blinks

If the downshift symbol is displayed and the gear position indicator blinks, the gear position is too high. Shift the transmission to a lower gear.

- You can shift down by simply pushing down the shift pedal.

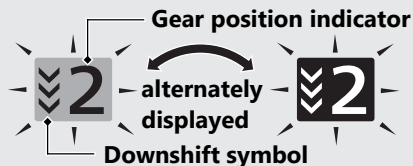



"M" symbol is displayed


If the "M" symbol is displayed, the Honda E-Clutch function is off.



"M" symbol is turned on with orange background

If the M symbol is displayed with an orange background and the Honda E-Clutch warning indicator are displayed, the Honda E-Clutch function is not working properly. Stop the vehicle at a safe place and turn the ignition switch to the  (Off) position, and then to the  (On) position again, then you can temporarily ride the vehicle using the manual transmission.

Have your vehicle inspected by your dealer.

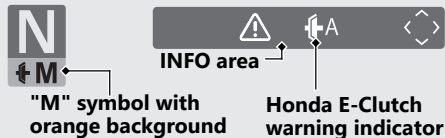

Emergency Stop Signal

Emergency stop signal activates when the system detects hard braking about 50 km/h (31 mph) or above to alert drivers behind you about sudden braking by rapidly flashing both turn signal lights. This may help to alert drivers behind you to take appropriate means to avoid a possible collision with your vehicle.

The emergency stop signal stops operating when:

- You release the brakes.
- The ABS is deactivated.
- Your vehicle's decelerating speed becomes moderate.
- You press the hazard switch.

When the system activates:




① Hard braking



① Brakelight comes on


② Both turn signals flash

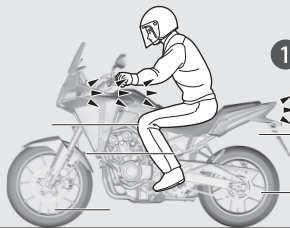

② Both turn signal indicators blink

- ▶ The emergency stop signal is not a system that can prevent a possible rear-end collision caused by your hard braking. It is always recommended to avoid hard braking unless it is absolutely necessary.
- ▶ The emergency stop signal does not activate while the hazard switch is on.
- ▶ If the ABS stops working for a certain period during braking, the emergency stop signal may not activate at all.

Refuelling

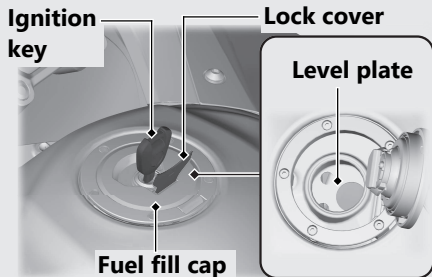

Do not fill with fuel above the level plate.

Fuel type: Unleaded petrol only

Except LA, II LA type

Fuel octane number: Your vehicle is designed to use Research Octane Number (RON) 91 or higher.

LA, II LA type

Fuel octane number: Your vehicle is designed to use Research Octane Number (RON) 90 or higher.

Except CB500XA/XAC

Tank capacity: 17.1 L (4.52 US gal, 3.76 Imp gal)

CB500XA/XAC ED, II ED, III ED, KO, II KO, III KO type

Tank capacity: 17.5 L (4.62 US gal, 3.85 Imp gal)

CB500XA/XAC except ED, II ED, III ED, KO, II KO, III KO type

Tank capacity: 17.7 L (4.68 US gal, 3.89 Imp gal)

Refuelling and Fuel Guidelines ➡ P.16

Opening the Fuel Fill Cap

Open the lock cover, insert the ignition key, and turn it clockwise to open the cap.

Closing the Fuel Fill Cap

- ❶ After refuelling, push the fuel fill cap closed until it locks.
- ❷ Remove the key and close the lock cover.
 - ▶ The key cannot be removed if the cap is not locked.

WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.


- Stop the engine, and keep heat, sparks, and flames away.
- Only handle fuel outdoors.
- Wipe up spills immediately.

Storage Equipment

Helmet Holder

Except CB500XA/XAC

The helmet holders are located underside of the rear seat.

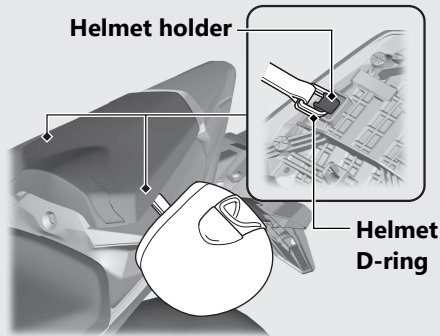


► Use the helmet holder only when parked.

Removing the Rear Seat ➡ P.136

CB500XA/XAC

The helmet holder is located under the seat.
A helmet set wire is in the tool kit.

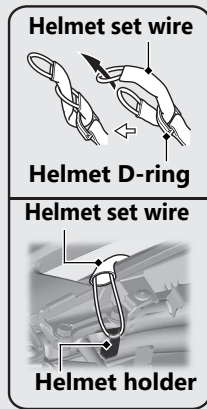

► Use the helmet holder only when parked.

Removing the Seat ➡ P.137

⚠ WARNING


Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

Tool Kit

Except CB500XA/XAC

The tool kit is located under the rear seat.

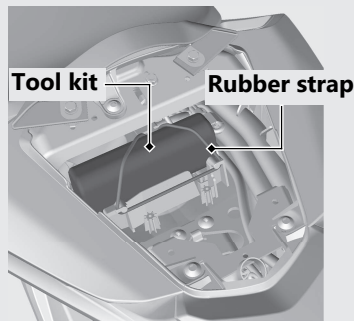


Removing the Rear Seat ➞ P.136

Storage Equipment *(Continued)*

CB500XA/XAC

The tool kit is located under the seat.

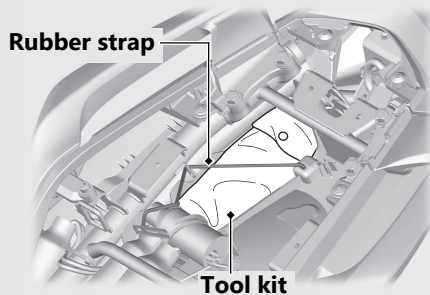


Removing the Seat ➞ P.137

Document Bag

Except CB500XA/XAC

The document bag is located underside of the front seat.

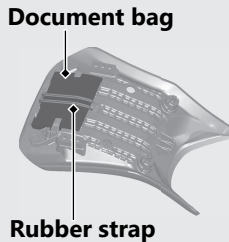

Removing the Front Seat ➞ P.135

CB500XA/XAC

The document bag is located underside of the seat.



Removing the Seat ➡ **P.137**


Storage Equipment *(Continued)*

Luggage Tie-Down Hooks


Except CB500XA/XAC

The luggage tie-down hooks is located on the underside of the rear seat.

Luggage tie-down hooks

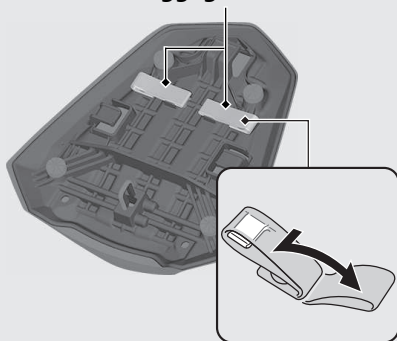

Luggage tie-down hooks

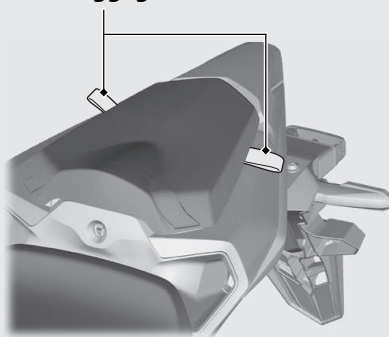

Never use the tie-down hooks to tow or lift the vehicle.

Removing the Rear Seat ➡ P.136

Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

Importance of Maintenance	P. 114
Maintenance Schedule	P. 115
Maintenance Fundamentals	P. 120
Tools	P. 131
Removing & Installing Body	
Components	P. 132
Battery	P. 132
Clip	P. 134
Front Seat	P. 135
Rear Seat	P. 136
Seat	P. 137
Left Side Cover	P. 138
Engine Oil	P. 140
Coolant	P. 142

Brakes	P. 144
Side Stand	P. 148
Drive Chain	P. 149
Clutch	P. 151
Throttle	P. 154
Other Adjustments	P. 155
Adjusting the Brake Lever	P. 155
Adjusting the Rear Suspension	P. 156

Importance of Maintenance

Importance of Maintenance

Keeping your vehicle well-maintained is absolutely essential to your safety and to protect your investment, obtain maximum performance, avoid breakdowns, and reduce air pollution. Maintenance is the owner's responsibility. Be sure to inspect your vehicle before each ride and perform the periodic checks specified in the Maintenance Schedule.

➤ P. 115

WARNING

Improperly maintaining your vehicle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

Maintenance Safety

Always read the maintenance instructions before you begin each task and make sure that you have the tools, parts, and skills required. We cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

Follow these guidelines when performing maintenance.

- Stop the engine and remove the key.
- Place your vehicle on a firm, level surface using the side stand or a maintenance stand to provide support.
- Allow the engine, muffler, brakes, and other high-temperature parts to cool before servicing as you can get burned.
- Run the engine only when instructed, and do so in a well-ventilated area.

Maintenance Schedule

The maintenance schedule specifies the maintenance requirements necessary to ensure safe, dependable performance and proper emission control.

Maintenance work should be performed in accordance with Honda's standards and specifications by properly trained and equipped technicians. Your dealer meets all of these requirements. Keep an accurate record of maintenance to help ensure that your vehicle is properly maintained.











Make sure that whomever performs the maintenance completes this record.

All scheduled maintenance is considered a normal owner operating cost and will be charged to you by your dealer. Retain all receipts. If you sell the vehicle, these receipts should be transferred with the vehicle to the new owner.



Honda recommends that your dealer should road test your vehicle after each periodic maintenance is carried out.

Maintenance Schedule

ED, II ED, III ED, KO, II KO, III KO type

Items	Pre-ride Check P. 120	Odometer Readings *1						Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	12	24	36	48			
		× 1,000 mi	0.6	8	16	24	32			
Honda Diagnostic System			I	I	I	I	I			—
Fuel Line				I	I	I	I	I		—
Fuel Level		I								106
Throttle Operation		I		I	I	I	I	I		154
Air Cleaner *2					R		R			—
Crankcase Breather *3				C	C	C	C			128
Spark Plug					R		R			—
Valve Clearance					I		I			—
Engine Oil		I	R	R	R	R	R	R		—
Engine Oil Filter			R		R		R			—
Engine Idle Speed				I	I	I	I	I		—
Radiator Coolant *4		I		I	I	I	I	I	3 Years	142
Cooling System				I	I	I	I	I		—
Secondary Air Supply System					I		I			—
Evaporative Emission Control System					I		I			—

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
-  : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L** : Lubricate
- R** : Replace
- C** : Clean

Items		Pre-ride Check ➡ P. 120	Odometer Readings *1						Annual Check	Regular Replace	Refer to page
			× 1,000 km	1	12	24	36	48			
			× 1,000 mi	0.6	8	16	24	32			
Drive Chain		I	Every 1,000 km (600 mi): I L								149
Drive Chain Slider					I	I	I	I			150
Brake Fluid *4		I			I	I	I	I	I	2 Years	144
Brake Pads Wear		I			I	I	I	I	I		145
Brake System					I	I	I	I	I		120
Brakelight Switch					I	I	I	I	I		147
Headlight Aim					I	I	I	I	I		–
Lights/Horn		I									–
Engine Stop Switch		I									–
Clutch System		I			I	I	I	I	I		151
Side Stand		I			I	I	I	I	I		148
Suspension	✂				I	I	I	I	I		–
Nuts, Bolts, Fasteners	✂				I	I	I	I	I		–
Wheels/Tyres	✂	I			I	I	I	I	I		128
Steering Head Bearings	✂				I	I	I	I	I		–

Notes:

*1 : At higher odometer reading, repeat at the frequency interval established here.










*2 : Service more frequently when riding in unusually wet or dusty areas.

*3 : Service more frequently when riding in rain or at full throttle.



*4 : Replacement requires mechanical skill.

Maintenance Schedule

Except ED, II ED, III ED, KO, II KO, III KO type































 

 




 

 































 

 





 

 














 

 



Items		Pre-ride Check P. 120	Odometer Readings *1								Annual Check	Regular Replace	Refer to page
			× 1,000 km	1	6	12	18	24	30	36			
			× 1,000 mi	0.6	4	8	12	16	20	24			
Honda Diagnostic System				I	I	I	I	I	I			–	
Fuel Line					I		I		I	I		–	
Fuel Level		I										106	
Throttle Operation		I			I		I		I	I		154	
Air Cleaner *2						R			R			–	
Crankcase Breather *3				C	C	C	C	C	C			128	
Spark Plug							R					–	
Valve Clearance							I					–	
Engine Oil		I		R		R		R		R	R	–	
Engine Oil Filter				R				R				–	
Engine Idle Speed					I			I		I	I	–	
Radiator Coolant *4		I			I			I		I	I	3 Years	142
Cooling System					I			I		I	I	–	
Secondary Air Supply System								I				–	

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.
Procedures are provided in an official Honda Shop Manual.
-  : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
L : Lubricate
R : Replace
C : Clean

Items		Pre-ride Check P. 120	Odometer Readings *1								Annual Check	Regular Replace	Refer to page
			× 1,000 km	1	6	12	18	24	30	36			
			× 1,000 mi	0.6	4	8	12	16	20	24			
Evaporative Emission Control System (Except PH, II PH, III PH type)													-
Drive Chain			Every 1,000 km (600 mi):  										149
Drive Chain Slider													150
Brake Fluid *4												2 Years	144
Brake Pads Wear													145
Brake System													120
Brakelight Switch													147
Headlight Aim													-
Lights/Horn													-
Engine Stop Switch													-
Clutch System													151
Side Stand													148
Suspension													-
Nuts, Bolts, Fasteners													-
Wheels/Tyres													128
Steering Head Bearings													-

Notes:

*1 : At higher odometer reading, repeat at the frequency interval established here.

*2 : Service more frequently when riding in unusually wet or dusty areas.

*3 : Service more frequently when riding in rain or at full throttle.

*4 : Replacement requires mechanical skill.

Pre-ride Inspection

To ensure safety, it is your responsibility to perform a pre-ride inspection and make sure that any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tyre, can be a major inconvenience.

Check the following items before you get on your vehicle:

- Fuel level - Fill fuel tank when necessary. ➡ P. 106
- Throttle - Check for smooth opening and full closing in all steering positions. ➡ P. 154
- Engine oil level - Add engine oil if necessary. Check for leaks. ➡ P. 140
- Coolant level - Add coolant if required. Check for leaks. ➡ P. 142

- Drive chain - Check condition and slack, adjust and lubricate if necessary. ➡ P. 149
- Brakes - Check operation;
Front and Rear: check brake fluid level and pads wear ➡ P. 144, ➡ P. 145
- Lights and horn - Check that lights, indicators and horn function properly.
- Engine stop switch - Check for proper function. ➡ P. 81
- Clutch - Check operation;
Adjust freewheel if necessary ➡ P. 151
- Side stand ignition cut-off system - Check for proper function. ➡ P. 148
- Wheels and tyres - Check condition, air pressure and adjust if necessary. ➡ P. 128

Replacing Parts


Always use Honda Genuine Parts or their equivalents to ensure reliability and safety.

Except PH, II PH, III PH, TH, II TH, III TH, V, II V, III V type

When ordering coloured components, specify the model name, colour, and code mentioned on the colour label.


Except CB500XA/XAC

The colour label is attached to the rear fender under the rear seat. ➡ P. 136.

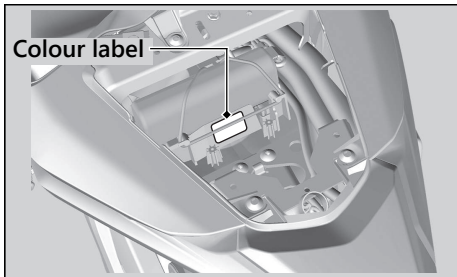

CB500XA/XAC

The colour label is attached to the rear fender under the seat. ➡ P. 137.

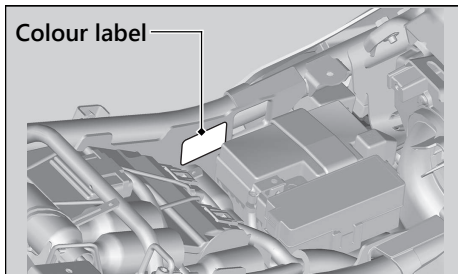

⚠ WARNING

Installing non-Honda parts may make your vehicle unsafe and cause a crash in which you can be seriously hurt or killed.

Always use Honda Genuine Parts or equivalents that have been designed and approved for your vehicle.

Battery

Your vehicle has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water. Clean the battery terminals if they become dirty or corroded.

Do not remove the battery cap seals. There is no need to remove the cap when charging.

NOTICE

Your battery is a maintenance-free type and can be permanently damaged if the cap strip is removed.



This symbol on the battery means that this product must not be treated as household waste.

NOTICE

An improperly disposed of battery can be harmful to the environment and human health. Always confirm local regulations for proper battery disposal instruction.

What to do in an emergency

If any of the following occur, immediately see your doctor.

- Electrolyte splashes into your eyes:
 - ▶ Wash your eyes repeatedly with cool water for at least 15 minutes. Using water under pressure can damage your eyes.
- Electrolyte splashes onto your skin:
 - ▶ Remove affected clothing and wash your skin thoroughly using water.
- Electrolyte splashes into your mouth:
 - ▶ Rinse mouth thoroughly with water, and do not swallow.

⚠ WARNING


The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery servicing.

Cleaning the Battery Terminals

1. Remove the battery. ➡ P. 132
2. If the terminals are starting to corrode and are coated with a white substance, wash with warm water and wipe clean.
3. If the terminals are heavily corroded, clean and polish the terminals with a wire brush or sandpaper. Wear safety glasses.

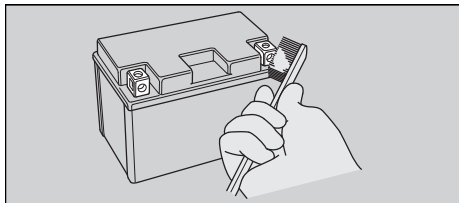

4. After cleaning, reinstall the battery. The battery has a limited life span. Consult your dealer about when you should replace the battery. Always replace the battery with another maintenance-free battery of the same type.


NOTICE


Installing non-Honda electrical accessories can overload the electrical system, discharging the battery and possibly damaging the system.

Fuses

Fuses protect the electrical circuits on your vehicle. If something electrical on your vehicle stops working, check for and replace any blown fuses. ➤ P. 172

Inspecting and Replacing Fuses

Turn the ignition switch to the  (Off) position to remove and inspect fuses. If a fuse is blown, replace with a fuse of the same rating. For fuse ratings, see "Specifications." ➤ P. 205

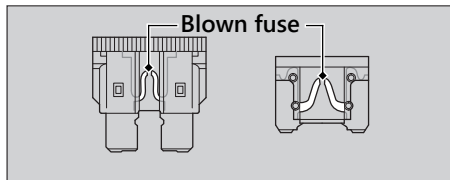

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

If a fuse fails repeatedly, you likely have an electrical fault. Have your vehicle inspected by your dealer.

Engine Oil

Engine oil consumption varies and oil quality deteriorates according to riding conditions and time elapsed.

Check the engine oil level regularly, and add the recommended engine oil if necessary. Dirty oil or old oil should be changed as soon as possible.


Selecting the Engine Oil

For recommended engine oil, see "Specifications." ➤ P. 204


If you use non-Honda engine oil, check the label to make sure that the oil satisfies all of the following standards:

- JASO T 903 standard*1: MA
- SAE standard*2: 10W-30
- API classification*3: SJ or higher

- *1. The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. For example, the following label shows the MA classification.

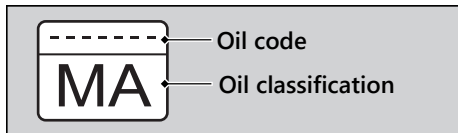

- *2. The SAE standard grades oils by their viscosity.
- *3. The API classification specifies the quality and performance rating of engine oils. Use SJ or higher oils, excluding oils marked as "Energy Conserving" or "Resource Conserving" on the circular API service symbol.

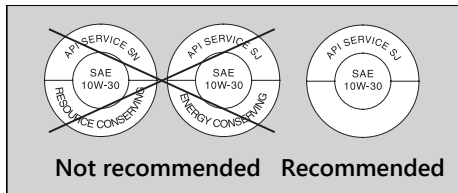

Brake Fluid

Do not add or replace brake fluid, except in an emergency. Use only fresh brake fluid from a sealed container. If you do add fluid, have the brake system serviced by your dealer as soon as possible.

NOTICE

Brake fluid can damage plastic and painted surfaces. Wipe up spills immediately and wash thoroughly.

Recommended brake fluid:

Honda DOT 4 Brake Fluid or equivalent


Drive Chain

The drive chain must be inspected and lubricated regularly. Inspect the chain more frequently if you often ride on bad roads, ride at high speed, or ride with repeated fast acceleration. ■ P. 149

If the chain does not move smoothly, makes strange noises, has damaged rollers, has loose pins, has missing O-rings, or has kinks, have the chain inspected by your dealer.

Maintenance Fundamentals

Also inspect the drive sprocket and driven sprocket. If either has worn or damaged teeth, have the sprocket replaced by your dealer.

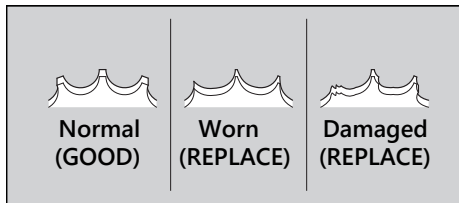

NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.


Cleaning and Lubricating

After inspecting the slack, clean the chain and sprockets while rotating the rear wheel. Use a dry cloth with chain cleaner designed specifically for O-ring chains, or neutral detergent. Use a soft brush if the chain is dirty.

After cleaning, wipe dry and lubricate with the recommended lubricant.

Recommended lubricant:

Drive chain lubricant designed specifically for O-ring chains
If not available, use SAE 80 or 90 gear oil.

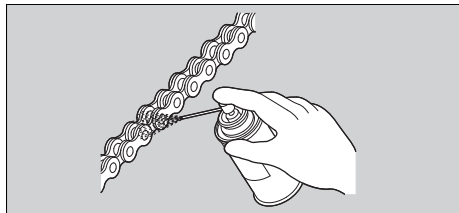

Do not use a steam cleaner, a high pressure cleaner, a wire brush, volatile solvent such as petrol and benzene, abrasive cleaner, chain cleaner or lubricant NOT designed specifically for O-ring chains as these can damage the rubber O-ring seals.

Avoid getting lubricant on the brakes or tyres.
Avoid applying excess chain lubricant to prevent spray onto your clothes and the vehicle.

Recommended Coolant

India, Thailand, Vietnam, Philippines only

Use only genuine HONDA PRE-MIX COOLANT without diluting with water. Genuine HONDA PRE-MIX COOLANT is excellent at preventing corrosion and overheating.

The coolant should be inspected and replaced properly by following the maintenance schedule. ➤ P. 115

NOTICE

Using coolant not specified for aluminium engines or tap/mineral water can cause corrosion.

Except India, Thailand, Vietnam, Philippines

Pro Honda HP Coolant is a pre-mixed solution of antifreeze and distilled water.

Concentration:

50% antifreeze and 50% distilled water

A concentration of antifreeze below 40% will not provide proper corrosion and cold temperature protection.

A concentration of up to 60% will provide better protection in colder climates.

NOTICE

Using coolant not specified for aluminium engines or tap/mineral water can cause corrosion.

Crankcase Breather

Service more frequently when riding in rain, at full throttle, or after the vehicle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.

If the drain tube overflows, the air filter may become contaminated with engine oil, causing poor engine performance.

Tyres (Inspecting/Replacing)


Checking the Air Pressure

Visually inspect your tyres and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tyres look low. Always check air pressure when your tyres are cold.

Inspecting for Damage


Inspect the tyres for cuts, slits, or cracks that expose fabric or cords, or nails or other foreign objects embedded in the side of the tyre or the tread.

Also inspect for any unusual bumps or bulges in the side walls of the tyres.

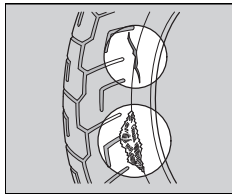


Inspecting for Abnormal Wear

Inspect the tyres for signs of abnormal wear on the contact surface.

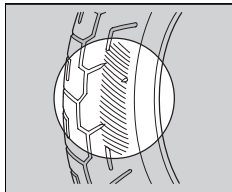

Inspecting Tread Depth

Inspect the tread wear indicators. If they become visible, replace the tyres immediately. For safe riding, you should replace the tyres when the minimum tread depth is reached.

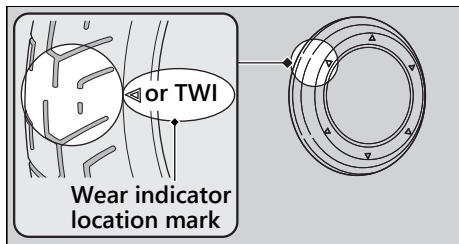

⚠ WARNING

Riding on tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Germany

German law prohibits use of tyres whose tread depth is less than 1.6 mm.

Have your tyres replaced by your dealer. For recommended tyres, air pressure, and minimum tread depth, see "Specifications."

➤ P. 204

Follow these guidelines whenever you replace tyres:

- Use the recommended tyres or their equivalents of the same size, construction, speed rating, and load range.
- Have the wheel balanced with Honda Genuine balance weights or equivalent after the tyre is installed.
- Do not install a tube inside a tubeless tyre on this vehicle. Excessive heat build-up can cause the tube to burst.
- Use only tubeless tyres on this vehicle. The rims are designed for tubeless tyres, and during hard acceleration or braking, a tube-type tyre could slip on the rim and cause the tyre to rapidly deflate.

WARNING

Installing improper tyres on your vehicle can adversely affect handling and stability, and can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tyres recommended in this owner's manual.

Except CB500XA/XAC

The tool kit is stored under the rear seat.

➔ P. 136

CB500XA/XAC

The tool kit is stored under the seat. ➔ P. 137

You can perform some roadside repairs, minor adjustments and parts replacement with the provided tools.


- Pin spanner
- 10 × 14 mm Open end wrench
- Standard/Phillips screwdriver
- Screwdriver handle
- Extension bar
- 5 mm Hex wrench
- Fuse puller

CB500XA/XAC only

- Helmet set wire

Battery

Removal

Make sure the ignition switch is in the  (Off) position.


1. **Except CB500XA/XAC**


Remove the front seat. ➤ P. 135

CB500XA/XAC

Remove the seat. ➤ P. 137

2. Release the tab of fuse box.
3. Move the fuse box to the side.
4. Unhook and remove the rubber strap.
5. Disconnect the negative \ominus terminal from the battery.
6. Lift the battery cover up.

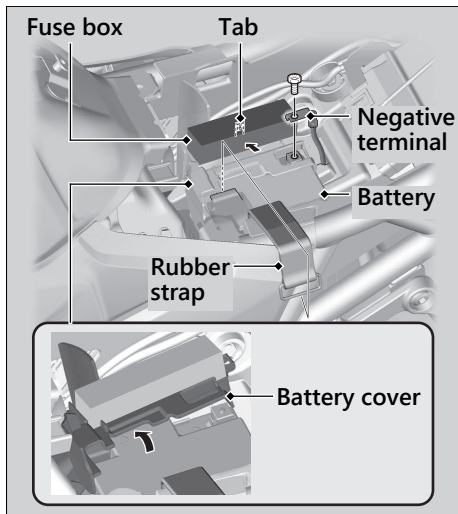

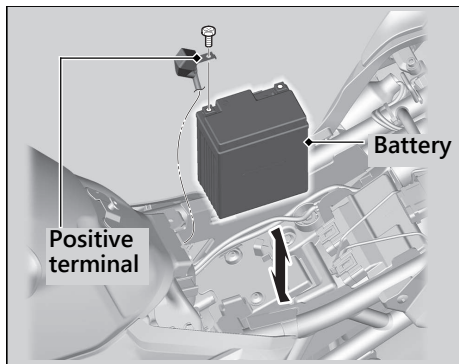

7. Disconnect the positive ⊕ terminal from the battery.
8. Remove the battery, taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive ⊕ terminal first. Make sure bolts and nuts are tight.

 
Make sure the clock information is correct after the battery is reconnected. ➤ P. 65
For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 122
"Battery Goes Dead." ➤ P. 170

Clip

Except CB500XA/XAC

Removal

1. Press down on the centre pin to release the lock.
2. Pull the clip out of the hole.



Installation


1. Push the bottom of the centre pin.



2. Insert the clip into the hole.
3. Press down on the centre pin to lock the clip.

Front Seat

Except CB500XA/XAC

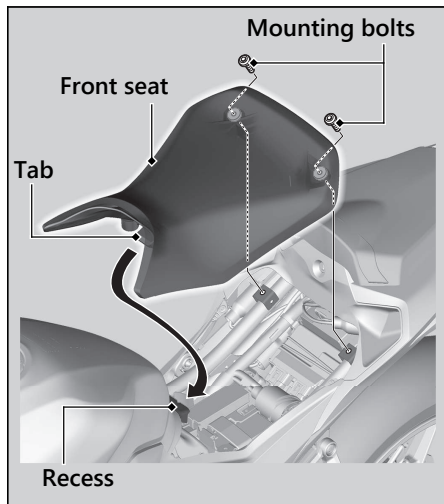

Removal


1. Pull the rear corners of the front seat up, then remove the mounting bolts.
2. Pull the front seat back and up.

Installation

1. Insert the tab into the recess.
 2. Install and tighten the mounting bolts securely.
- Make sure that the seat is locked securely in position by pulling it up lightly.

Rear Seat

Except CB500XA/XAC

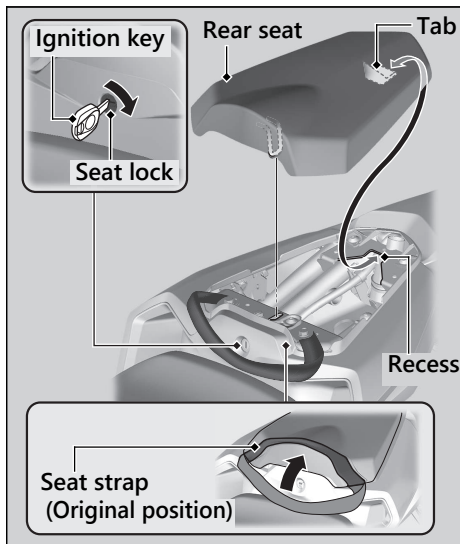

Removal

1. Move the seat strap forward.
2. Insert the ignition key into the seat lock.
3. Turn the ignition key clockwise, then pull the rear seat forward and up.


Installation

1. Insert the tab into the recess.
2. Push down on the front of the rear seat while inserting the ignition key into the seat lock.
Make sure that the seat is locked securely in position by pulling it up lightly.
3. Move the seat strap to its original position.

The seat locks automatically when closed.

Seat

CB500XA/XAC

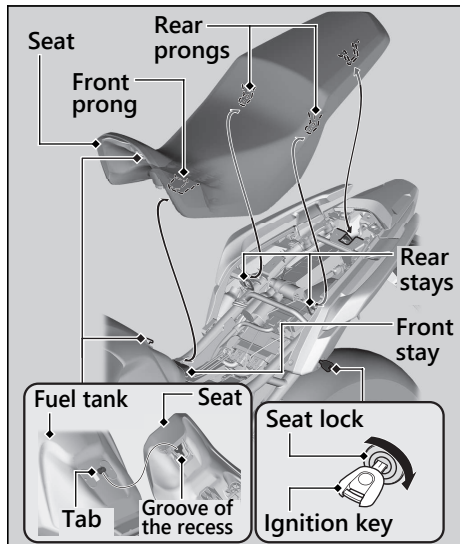

Removal

1. Insert the ignition key into the seat lock.
2. Turn the key clockwise, then pull the seat back and up.

Installation


1. Align the groove of the recess with the tab.
2. Insert the front prong into the front stay.
3. Insert the rear prongs into the rear stays.
4. Push forward and down on the rear of the seat until it locks in place.

Make sure that the seat is locked securely in position to pull it up lightly.

The seat locks automatically when closed. Take care not to lock your key in the compartment under the seat.

Left Side Cover

Except CB500XA/XAC

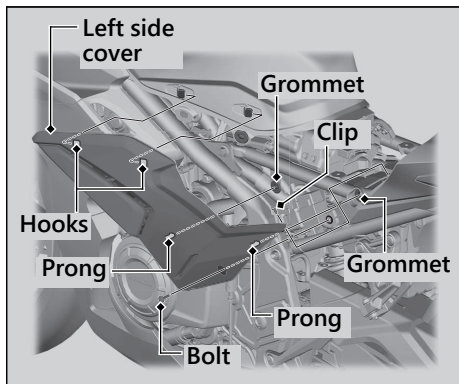


Removal

1. Remove the front seat. ► P. 135
2. Remove the bolt and clip. ► P. 134
3. Remove the prongs from the grommets, then remove the left side cover backward by releasing the hooks.

Installation

Install the parts in the reverse order of removal.

CB500XA/XAC

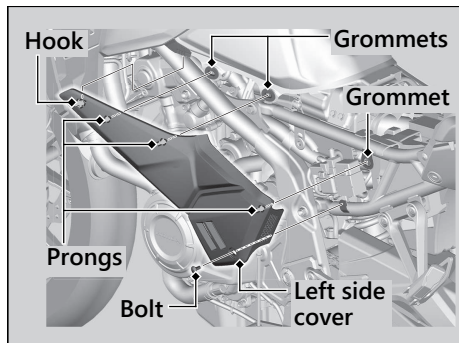

Removal


1. Remove the seat. ► P. 137
2. Remove the bolt.
3. Remove the prongs from the grommets, then remove the left side cover backward by releasing the hooks.

Installation

Install the parts in the reverse order of removal.

Checking the Engine Oil

1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn the ignition switch to the **○** (Off) position and wait for 2 to 3 minutes.
3. Place your vehicle in an upright position on a firm, level surface.
4. Check that the oil level is between the upper level and lower level marks on the oil level inspection window.

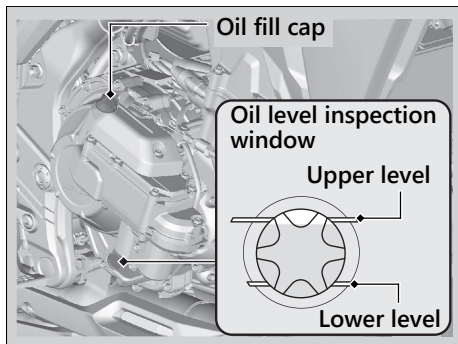

Adding Engine Oil

If the engine oil is below or near the lower level mark, add the recommended engine oil.

► P. 124, ► P. 204

1. Remove the oil fill cap. Add the recommended oil until it reaches the upper level mark.
 - Place your vehicle in an upright position on a firm, level surface when checking the oil level.
 - Do not overfill above the upper level mark.
 - Make sure no foreign objects enter the oil filler opening.
 - Wipe up any spills immediately.

2. Securely reinstall the oil fill cap.

NOTICE

Overfilling with oil or operating with insufficient oil can cause damage to your engine. Do not mix different brands and grades of oil. They may affect lubrication and clutch operation.

For the recommended oil and oil selection guidelines, see "Maintenance Fundamentals."


► P. 124

Checking the Coolant

Check the coolant level in the reserve tank while the engine is cold.

1. Place your vehicle on a firm, level surface.
2. Hold your vehicle in an upright position.
3. Check that the coolant level is between the UPPER level and LOWER level marks on the reserve tank.

If the coolant level is dropping noticeably or the reserve tank is empty, you likely have a serious leak. Have your vehicle inspected by your dealer.

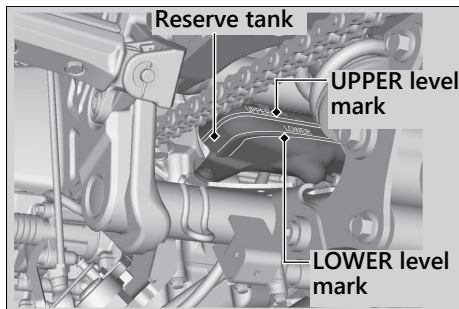

Adding Coolant

If the coolant level is below the LOWER level mark, add the recommended coolant (➡ P. 127) until the level reaches the UPPER level mark.


Add fluid only from the reserve tank cap and do not remove the radiator cap.

1. Remove the reserve tank cap and add fluid while monitoring the coolant level.
 - Do not overfill above the UPPER level mark.
 - Make sure no foreign objects enter the reserve tank opening.
2. Securely reinstall the reserve tank cap.

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, potentially scalding you.

Always let the engine and radiator cool down before removing the radiator cap.


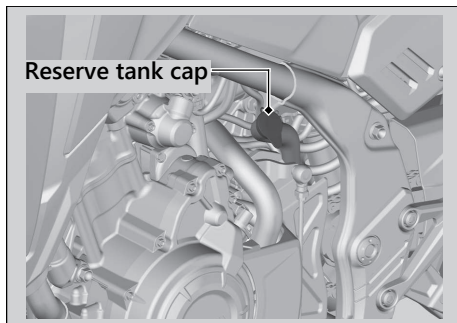


Checking Brake Fluid

1. Place your vehicle in an upright position on a firm, level surface.
2. **Front** Check that the brake fluid reservoir is horizontal and that the fluid level is above the LOWER level mark.
Rear Check that the brake fluid reservoir is horizontal and that the fluid level is between the LOWER level and UPPER level marks.

If the brake fluid level in either reservoir is below the LOWER level mark or the brake lever and pedal freeplay becomes excessive, inspect the brake pads for wear.

If the brake pads are not worn, you most likely have a leak. Have your vehicle inspected by your dealer.

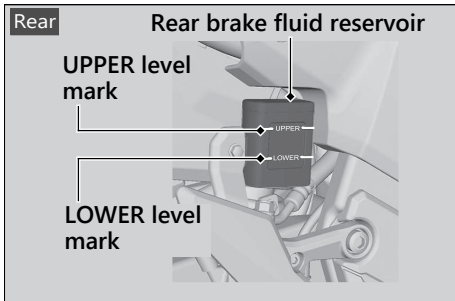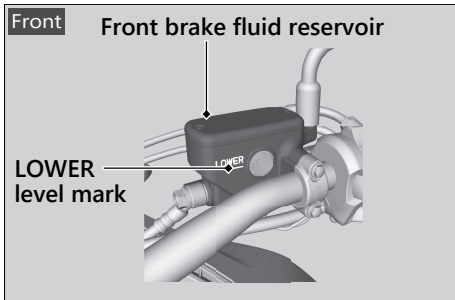

Inspecting the Brake Pads

Check the condition of the brake pad wear indicators.

The pads need to be replaced if a brake pad is:

Front Except CB500XA/XAC worn to the bottom of the indicator.




Front CB500XA/XAC worn to the indicator.

Rear worn to the indicator.

1. **Front Except CB500XA/XAC** Inspect the brake pads from in front of the brake caliper.
Front CB500XA/XAC Inspect the brake pads from below the brake caliper.
► Always inspect both left and right brake calipers.
2. **Rear** Inspect the brake pads from the rear right of the vehicle.


If necessary, have the pads replaced by your dealer.

Always replace both left and right brake pads at the same time.

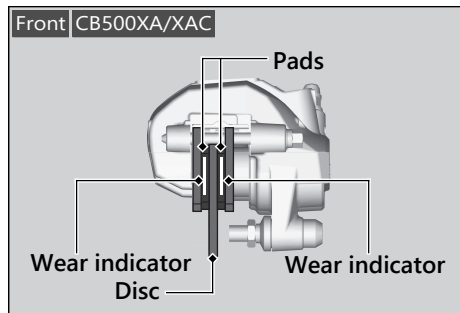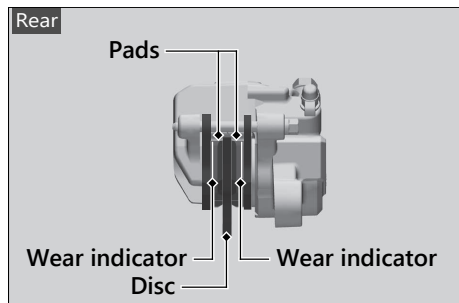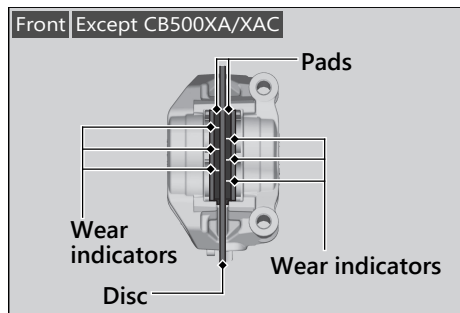


Adjusting the Brakelight Switch

Check the operation of the brakelight switch. Hold the brakelight switch and turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

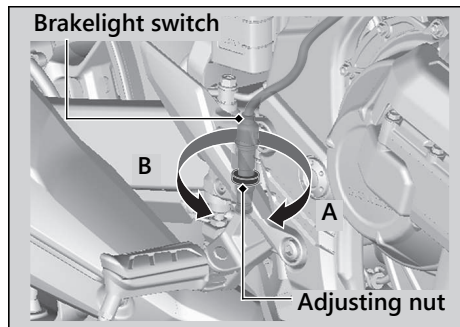

Checking the Side Stand

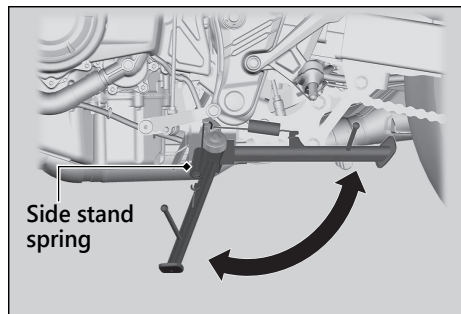

1. Check that the side stand operates smoothly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.
2. Check the spring for damage or loss of tension.
3. Sit on the vehicle, shift the transmission to Neutral, and raise the side stand.

4. Start the engine, pull the clutch lever in, and shift the transmission into gear.
5. Lower the side stand all the way. The engine should stop as you lower the side stand. If the engine doesn't stop, have your vehicle inspected by your dealer.

Inspecting the Drive Chain Slack

Check the drive chain slack at several points along the chain. If the slack is not constant at all points, some links may be kinked and binding. Have the chain inspected by your dealer.

1. Shift the transmission to Neutral. Stop the engine.
2. Place your vehicle on its side stand on a firm, level surface.
3. Move the lower part of the drive chain up and down to check chain slack, midway between the sprockets.

Drive chain slack:


Except CB500XA/XAC

25 - 35 mm (1.0 - 1.4 in)

CB500XA/XAC

30 - 40 mm (1.2 - 1.6 in)


- Do not ride your vehicle if the slack exceeds 50 mm (2.0 in).

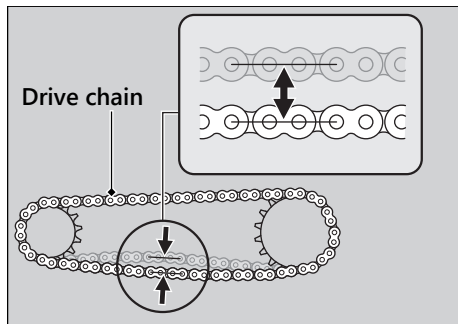

4. Roll the vehicle forward and check that the chain moves smoothly.
5. Inspect the sprockets. ➤ P. 125
6. Clean and lubricate the drive chain. ➤ P. 126

Checking the Drive Chain Slider

Check the condition of the drive chain slider.
The drive chain slider will need to be replaced if it is worn to the wear limit line.
If necessary, have the drive chain slider replaced by your dealer.

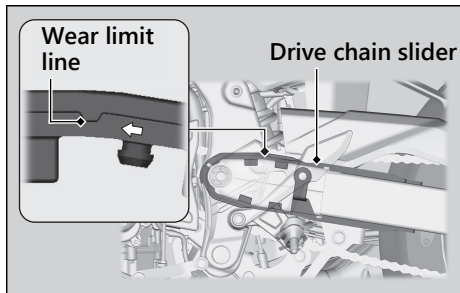

Checking the Clutch


I Checking the Clutch Lever Freeplay

CB500FA/CBR500RA/CB500XA

Check the clutch lever freeplay.


CB500FAC/CBR500RAC/CB500XAC

Make sure that the ignition switch is in the  (Off) position.

- Clutch lever freeplay will increase after ignition switch is turned to the  (On) position with gear position in Neutral.

Freeplay at the clutch lever:

10 - 20 mm (0.4 - 0.8 in)

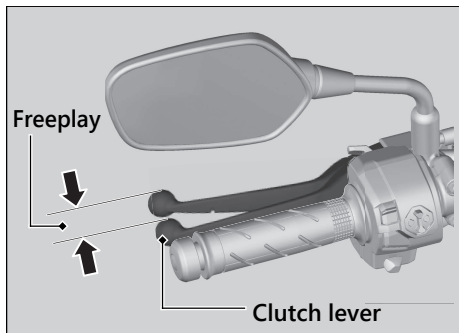

Check the clutch cable for kinks or signs of wear. If necessary, have it replaced by your dealer.

Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.

NOTICE

Improper freeplay adjustment can cause premature clutch wear.

Clutch ► Adjusting the Clutch Lever Freeplay

Adjusting the Clutch Lever Freeplay

I Upper Adjustment


CB500FA/CBR500RA/CB500XA

Attempt adjustment with the upper clutch cable adjuster first.

CB500FAC/CBR500RAC/CB500XAC

Make sure that the ignition switch is in the ○ (Off) position.

- Clutch lever freeplay will increase after ignition switch is turned to the I (On) position with gear position in Neutral.
- 1. Loosen the upper lock nut.
- 2. Turn the upper clutch cable adjuster until the freeplay is 10 - 20 mm (0.4 - 0.8 in).
- 3. Tighten the upper lock nut and check the freeplay again.

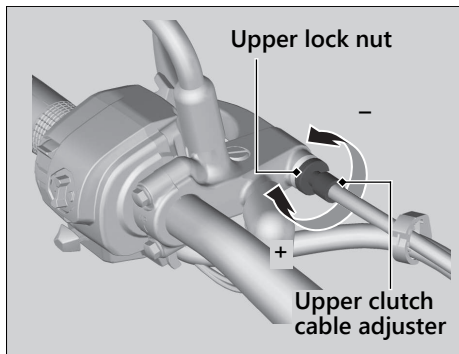

I Lower Adjustment

CB500FA/CBR500RA/CB500XA


If the upper clutch cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained, attempt adjustment with the lower clutch cable adjusting nut.

CB500FAC/CBR500RAC/CB500XAC

Make sure that the ignition switch is in the **○** (Off) position.

- Clutch lever freeplay will increase after ignition switch is turned to the **I** (On) position with gear position in Neutral.
- 1. Loosen the upper lock nut and turn the upper clutch cable adjuster all the way in (to provide maximum freeplay). Tighten the upper lock nut.
- 2. Loosen the lower lock nut.
- 3. Turn the adjusting nut until the clutch lever freeplay is 10 - 20 mm (0.4 - 0.8 in).
- 4. Tighten the lower lock nut and check the clutch lever freeplay.

- 5. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the vehicle does not creep. Gradually release the clutch lever and open the throttle. Your vehicle should move smoothly and accelerate gradually.

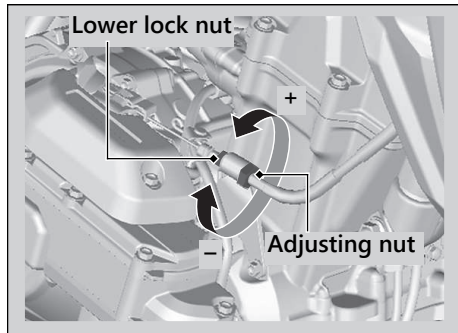


If proper adjustment cannot be obtained or the clutch does not work correctly, see your dealer.

Checking the Throttle

With the engine off, check that the throttle rotates smoothly from fully closed to fully open in all steering positions and throttle freeplay is correct. If the throttle does not move smoothly or close automatically, or if the cable is damaged, have the vehicle inspected by your dealer.

Freeplay at the throttle grip flange:

2 - 6 mm (0.1 - 0.2 in)

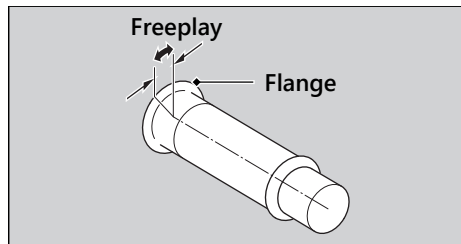

Adjusting the Brake Lever

You can adjust the distance between the brake lever and handle grip.


Adjustment method

Turn the adjuster until the numbers align with the index mark while pushing the lever forward in the desired position.

After adjustment, check that the lever operates correctly before riding.

NOTICE

Do not turn the adjuster beyond its natural limit.

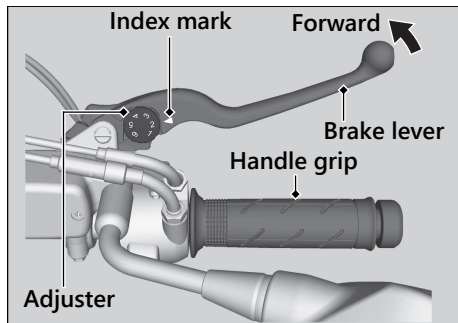


Adjusting the Rear Suspension

Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Turn the adjuster using the pin spanner and extension bar provided in the tool kit (► P. 131).

Use the pin spanner and extension bar to turn the adjuster. Positions 1 is for a decrease spring preload (soft), or turn the position 3 to 5 increase spring preload (hard). The standard position is 2.

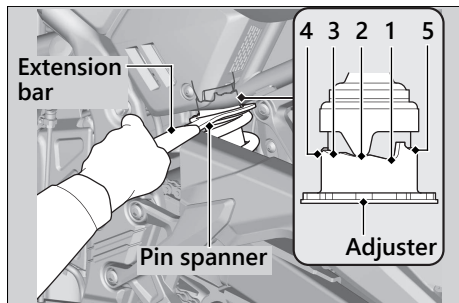

NOTICE

Attempting to adjust directly from 1 to 5 or 5 to 1 may damage the shock absorber.

NOTICE

Do not turn the adjuster beyond its limits.

NOTICE

The rear shock absorber damper unit contains high pressure nitrogen gas. Do not attempt to disassemble, service, or improperly dispose of the damper. See your dealer.



Troubleshooting

Engine Will Not Start (HISS indicator stays on).....	P. 158
Overheating (High coolant temperature/warning indicators are on).....	P. 159
Warning Indicators On or Flashing.....	P. 160
Low Oil Pressure Indicator	P. 160
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 161
ABS (Anti-lock Brake System) Indicator	P. 162
Torque Control Indicator.....	P. 163
Other Warning Indications	P. 164
If the "-" is Blinking in the Gear Position Indicator	P. 164

If Honda E-Clutch warning indicator appears in the INFO area	P. 164
Fuel Gauge Failure Indication.....	P. 165
Coolant Temperature Gauge Failure Indication	P. 166
Tyre Puncture	P. 167
Smartphone Pairing Trouble	P. 168
Electrical Trouble.....	P. 170
Battery Goes Dead.....	P. 170
Burned-out Light Bulb	P. 170
Blown Fuse	P. 172
When the mirror arm is moved	P. 174

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➡ P. 93
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.
- Check if the HISS indicator stays on.
 - ▶ Turn the ignition switch to the  (Off) position and remove the key. Reinsert the key and turn the ignition switch to the  (On) position. If the indicator still stays on, check the following:
Check if there is no another HISS key (including spare key) close to the ignition switch.

Check if there are no any metallic seals or stickers on the key.

If the HISS indicator still stays on, have your vehicle inspected by your dealer.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➡ P. 93
- Check for a blown fuse. ➡ P. 172
- Check for a loose battery connection (➡ P. 132) or battery terminal corrosion (➡ P. 122).
- Check the condition of the battery.
➡ P. 170

If the problem continues, have your vehicle inspected by your dealer.

Overheating (High coolant temperature/warning indicators are on)

The engine is overheating when the following occurs:

- High coolant temperature indicator and warning indicator come on.

The high coolant temperature indicator is displayed in the warning information.

➡ P. 74, ➡ P. 78

Also the segment H flashes in the coolant temperature gauge. ➡ P. 74


- Acceleration becomes sluggish.


If this occurs, pull safely to the side of the road and perform the following procedure.

Extended fast idling may cause the high coolant temperature indicator and warning indicator to come on.

NOTICE

Continuing to ride with an overheated engine can cause serious damage to the engine.


1. Stop the engine using the ignition switch, and then turn the ignition switch to the  (On) position.

2. Check that the radiator fan is operating, and then turn the ignition switch to the  (Off) position.

If the fan is not operating:

Suspect a fault. Do not start the engine. Transport your vehicle to your dealer.

If the fan is operating:

Allow the engine to cool with the ignition switch in the  (Off) position.

3. After the engine has cooled, inspect the radiator hose and check if there is a leak.

➡ P. 142

If there is a leak:

Do not start the engine. Transport your vehicle to your dealer.

4. Check the coolant level in the reserve tank. ➡ P. 142

► Add coolant as necessary.

5. If 1-4 check normal, you may continue riding, but closely monitor the temperature gauge.

Low Oil Pressure Indicator

If the low oil pressure indicator and the warning indicator come on, pull safely to the side of the road and stop the engine. The low oil pressure indicator is displayed in the warning information. ➤ P. 74, ➤ P. 78

NOTICE

Continuing to ride with low oil pressure can cause serious damage to the engine.

1. Check the engine oil level, and add oil as necessary. ➤ P. 140, ➤ P. 141
2. Start the engine.
 - Only continue riding if the low oil pressure indicator and the warning indicator go off.

Rapid acceleration may momentarily cause the low oil pressure indicator and the warning indicator to come on, especially if the oil is at or near the low level.

If the low oil pressure indicator and the warning indicator stay on when the oil level is at the proper level, stop the engine and contact your dealer.

If the engine oil level goes down rapidly, your vehicle may have a leak or another serious problem. Have your vehicle inspected by your dealer.

PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)

ED, II ED, III ED, KO, II KO, III KO type

Reasons for the indicator lamp to come on or blink

- Comes on if there is a problem with the engine emissions control system.
- Blinks when engine misfiring is detected.

What to do when the indicator lamp comes on

Avoid high speeds and immediately get your vehicle inspected at a dealer.

NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

What to do when the indicator lamp blinks

Park the vehicle in a safe place with no flammable items and wait at least 10 minutes with the engine stopped until it cools.

NOTICE

If the malfunction indicator lamp blinks again when restarting the engine, drive to the nearest dealer at 50 km/h (31 mph) or less. Have your vehicle inspected.

Except ED, II ED, III ED, KO, II KO, III KO type

If the indicator comes on while riding, you may have a serious problem with the PGM-FI system. Reduce speed and have your vehicle inspected by your dealer as soon as possible.

ABS (Anti-lock Brake System) Indicator

If the indicator operates in one of the following ways, you may have a serious problem with the ABS. Reduce your speed and have your vehicle inspected by your dealer as soon as possible.

- Indicator comes on or starts flashing while riding.
- Indicator does not come on when the ignition switch is in the **I** (On) position.
- Indicator does not go off at speeds above 10 km/h (6 mph).

If the ABS indicator stays on, your brakes will continue to work as a conventional system, but without the anti-locking function.

The ABS indicator may flash if you turn the rear wheel while the rear wheel is lifted off the ground. In this case, turn the ignition switch to the **O** (Off) position, and then to the **I** (On) position again. The ABS indicator will go off after your speed reaches 30 km/h (19 mph).

Torque Control Indicator

If the indicator operates in one of the following ways, you may have a serious problem with the Torque Control. Reduce your speed and have your vehicle inspected by your dealer as soon as possible.

- Indicator comes and stays on (solid) while riding.
- Indicator does not come on when the ignition switch is turned to the **I** (On) position.
- Indicator does not go off at speeds above 5 km/h (3 mph).


Even when the Torque Control indicator is on, your vehicle will have normal riding ability without Torque Control function.

- When the indicator comes on while the Torque Control is in operation, you will have to completely close the throttle to regain normal riding ability.

The Torque Control indicator may come on if you rotate the rear wheel while your vehicle is lifted off the ground. In this case, turn the ignition switch to the **O** (Off) position, and then to the **I** (On) position again. The Torque Control indicator will go off after your speed reaches 5 km/h (3 mph).

If the "-" is Blinking in the Gear Position Indicator


If the "-" and the current gear position are blinking in the gear position indicator, some function of Honda E-Clutch does not work. Have your vehicle inspected by your dealer. You can temporarily ride the vehicle as a manual transmission vehicle in this situation.

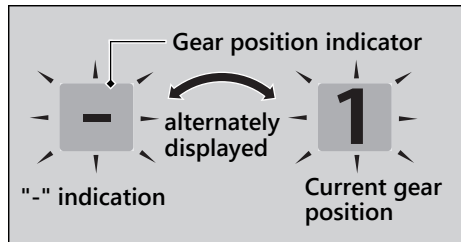

If Honda E-Clutch warning indicator appears in the INFO area

If the Honda E-Clutch warning indicator appears in the INFO area, Honda E-Clutch is not working correctly.



Stop the vehicle at a safe place and turn the ignition switch to the **O** (Off) position, and then to the **I** (On) position again, then you can temporarily ride the vehicle using the manual transmission. Have your vehicle inspected by your dealer.

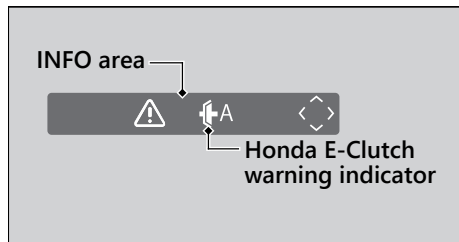

Fuel Gauge Failure Indication


If the fuel system has an error, the fuel gauge indicators will be displayed as shown in the illustration.

If these occurs, see your dealer as soon as possible.

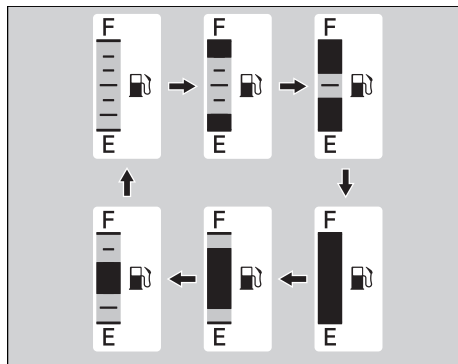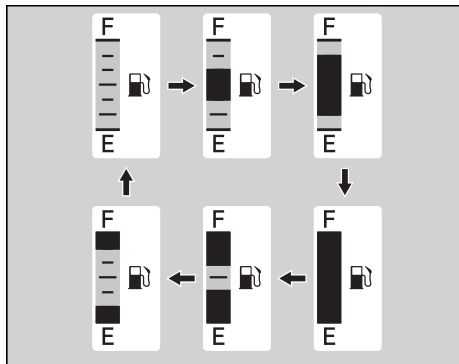

Coolant Temperature Gauge Failure Indication

If the cooling system has an error, "---" blinks as shown in the illustration. If this occurs, see your dealer as soon as possible.

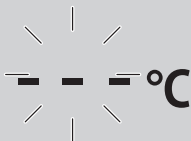

Tyre Puncture

Repairing a puncture or removing a wheel requires special tools and technical expertise. We recommend you have this type of service performed by your dealer.

After an emergency repair, always have the tyre inspected/replaced by your dealer.

Emergency Repair Using a Tyre Repair Kit

If your tyre has a minor puncture, you can make an emergency repair using a tubeless tyre repair kit.

Follow the instructions provided with the emergency tyre repair kit.

Riding your vehicle with a temporary tyre repair is very risky. Do not exceed 50 km/h (30 mph). Have the tyre replaced by your dealer as soon as possible.

WARNING

Riding your vehicle with a temporary tyre repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tyre repair, ride slowly and carefully and do not exceed 50 km/h (30 mph) until the tyre is replaced.

Smartphone Pairing Trouble

Symptom	Cause/remedy
Unable to pair a smartphone	Some smartphones you use may be incompatible with the vehicle and/or the operable functions may be limited.
	Check that the vehicle and smartphone are both in pairing mode. ▶ P. 90
	Check your surroundings to make sure no other device being paired is present before re-pairing. Presence of a <i>Bluetooth</i> ® device in the vicinity sometimes affects the pairing due to radio wave interference, etc.
	When connecting a smartphone, make sure no other <i>Bluetooth</i> ® device readied for pairing is present. Presence of a <i>Bluetooth</i> ® device in the vicinity sometimes affects the pairing due to radio wave interference, etc.
	Check that the vehicle pairing information is deleted from your smartphone <i>Bluetooth</i> ® setting. Depending on the smartphone used, connecting may not be possible unless the pairing information is deleted.

Symptom	Cause/remedy
Unable to connect a smartphone	Depending on the smartphone you use, it may take some time for the vehicle to connect to a smartphone and to start using a dedicated application.
	The connection may be temporarily disconnected when starting the engine, which is normal and not a malfunction. The smartphone will be reconnected after the engine is started.
	Check that <i>Bluetooth</i> ® status icon comes on. Refer to the instruction manual of your smartphone and check that your smartphone is in connectable state.
	Some smartphones you use may not connect automatically. For connecting, follow the instructions in the instruction manual of your smartphone.
	You cannot connect two or more smartphones at once.

If the problem continues after the above-described inspection, have your vehicle inspected by your dealer.

Battery Goes Dead

Charge the battery using a motorcycle battery charger.

Remove the battery from the vehicle before charging.



Do not use an automobile-type battery charger, as these can overheat a motorcycle battery and cause permanent damage. If the battery does not recover after recharging, contact your dealer.

NOTICE

Jump starting using an automobile battery can damage your vehicle's electrical system and is not recommended.

Burned-out Light Bulb


Follow the procedure below to replace a burned-out light bulb.

Turn the ignition switch to the  (Off) or  (Lock) position.

Allow the bulb to cool before replacing it.

Do not use bulbs other than those specified.

Check the replacement bulb for correct operation before riding.


For the light bulb wattage, see "Specifications."  P. 205

The headlight, brakelight, taillight, front turn signals/position lights and rear turn signals use several LEDs.

If there is an LED which is not turned on, see your dealer for servicing.

I License Plate Light Bulb

1. Remove the screws, license light cover and license light cover packing.
2. Pull out the bulb without turning it.

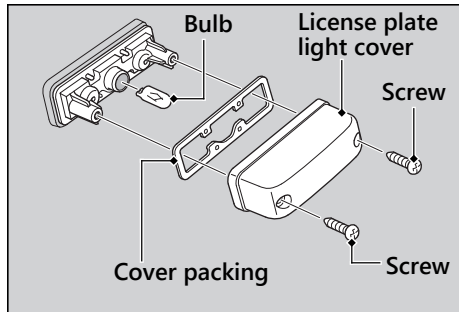


3. Install a new bulb and reinstall the parts in the reverse order of removal.

Blown Fuse


Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 124

Fuse Box Fuses

1. **Except CB500XA/XAC**
Remove the front seat. ► P. 135
CB500XA/XAC
Remove the seat. ► P. 137
2. Remove the fuse box cover.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Reinstall the fuse box cover.
5. **Except CB500XA/XAC**
Reinstall the front seat.
CB500XA/XAC
Reinstall the seat.

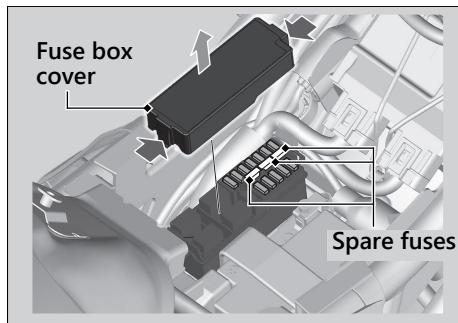

I Main Fuse

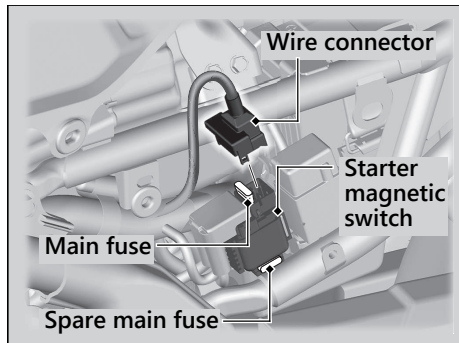

1. Remove the left side cover. ➤ P. 138, ➤ P. 139
2. Disconnect the wire connector of the starter magnetic switch.

3. Pull the main fuse out and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
► Spare main fuse is provided in the starter magnetic switch.
4. Reinstall parts in the reverse order of removal.

NOTICE


If a fuse fails repeatedly, you likely have an electrical problem. Have your vehicle inspected by your dealer.

When the mirror arm is moved

CBR500RA/RAC

When the mirror arm is moved, return the mirror arm to its original position.

- ▶ Be sure to align the index mark of the mirror arm with the index mark of the mirror base.

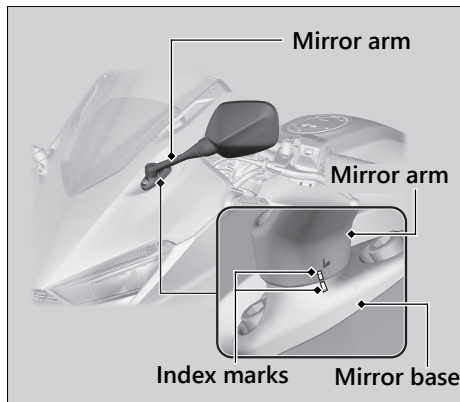

Information

Service Diagnostic Recorders	P. 176
Keys.....	P. 176
Instruments, Controls, & Other Features...	P. 177
Caring for Your Vehicle.....	P. 191
Storing Your Vehicle.....	P. 195
Transporting Your Vehicle	P. 195
You & the Environment	P. 196
Serial Numbers	P. 197
Fuels Containing Alcohol	P. 198
Catalytic Converter	P. 199

Service Diagnostic Recorders

Your vehicle is equipped with service-related devices that record information about powertrain performance and riding conditions. The data can be used to help technicians diagnose, repair and maintain the vehicle. This data may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

However, this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives, and contractors only for the purpose of the technical diagnosis, research, and development of the vehicle.

Keys

Ignition Key

This vehicle has two ignition keys and a key tag with a key number and a bar code.

The ignition key contains a special coded chip that is recognized by the immobilizer system (HISS) in order to start the engine. Handle the key carefully to prevent damaging the HISS components.

- Do not bend keys or subject them to undue stress.
- Avoid prolonged exposure to sunlight or high temperatures.
- Do not grind, drill or in any way alter their shape.
- Do not expose to strong magnetic objects.


If you lose all ignition keys and the key tag, the PGM-FI unit/ignition control module must be replaced by your dealer. To avoid this, keep a duplicate key.

If you lose a key, make another duplicate key immediately.

To make a duplicate key and register it with your HISS system, take the spare key, the key tag, and the vehicle to your dealer.

► Store the key tag in a safe location.

A metal key holder may cause damage to the area surrounding the ignition switch.

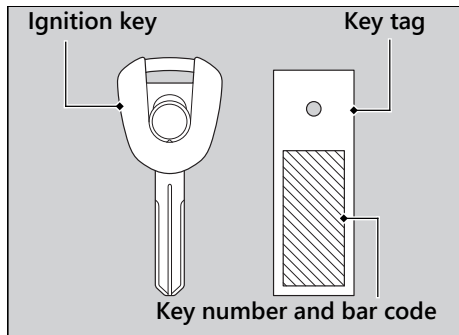

Instruments, Controls, & Other Features

Ignition Switch

Leaving the ignition switch in the **I** (On) position with the engine stopped will drain the battery. Do not turn the key while riding.

Engine Stop Switch

Do not use the engine stop switch except in an emergency. Doing so when riding will cause the engine to suddenly turn off, making riding unsafe.

If you stop the engine using the engine stop switch, turn the ignition switch to the **O** (Off) position. Failing to do so will drain the battery.





Odometer

The display remains at 999,999 when the odometer exceeds 999,999.

Tripmeter

Each tripmeter resets to 0.0 when the trip mileage exceeds 9,999.9.

HISS

The Honda Ignition Security System (HISS) immobilizes the engine's ignition system if an improperly-coded key is used to try and start the engine. When the ignition switch is turned to the  (Off) position, the HISS immobilizer system is always alert, even if the HISS indicator is not flashing. If the ignition switch is turned to the  (On) position with the engine stop switch in the  (Run) position, the HISS indicator turns on and goes off after a few seconds to indicate it is OK to start the engine. **HISS Indicator Does Not Turn off**  P. 158

The HISS indicator starts flashing every 2 seconds for 24 hours after the ignition switch is turned to the  (Off) position. You can turn this feature on or off.  P. 59

EU Directive

This immobilizer system complies with the RE (Radio Equipment) Directive (2014/53/EU).



The declaration of conformity to RE Directive is provided to the owner at the time of purchase. The declaration of conformity should be kept at a safe place. When the declaration of conformity is lost or is not provided, contact your dealer.

South Africa only



Argentina only



H-16919

Paraguay only



BSSEU10

Honda Lock Mfg. Co., Ltd.

NR:2016-3-1-0000102 HONDA

- DIESA S.A.
AVADA.DR.EUSEBIO AYALA KM 4, 5
ASUNCION
REPUBLIC OF PARAGUAY

Mexico only

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Thailand only



กสทช.

เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้
รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคม
หรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช.
เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุ
คมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาต
วิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม
พ.ศ. 2498



กสทช. | โทรคมนาคม

กำกับดูแลเพื่อประชาชน

Call Center 1200 (Inswr)

Document Bag

Except CB500XA/XAC

The owner's manual, registration, and insurance information can be stored in the plastic document bag underside of the front seat.

➔ P. 135

CB500XA/XAC

The owner's manual, registration, and insurance information can be stored in the plastic document bag underside of the seat. ➔ P. 137

Ignition Cut-off System

A banking (lean angle) sensor automatically stops the engine and fuel pump if the vehicle falls over. To reset the sensor, you must turn the ignition switch to the **O** (Off) position and back to the **I** (On) position before the engine can be restarted.

Assist-slipper Clutch System

The assist-slipper clutch system helps to prevent the rear tyre from locking up when the deceleration of your vehicle produces a strong engine braking effect. It also makes the clutch lever operation feel lighter.

Use only MA classification engine oil for your vehicle. Using engine oil other than MA classification oil could result in damage to the assist-slipper clutch system.


Automatic Brightness Control

The backlight brightness and background colour of the meter will be controlled automatically when "AUTO" is selected on the "BRIGHTNESS" and "BACKGROUND" setting.

➡ P. 61 ➡ P. 62

Ambient brightness is detected by the photosensor.

Do not damage or cover the photosensor. Otherwise, the automatic brightness control may not work properly.

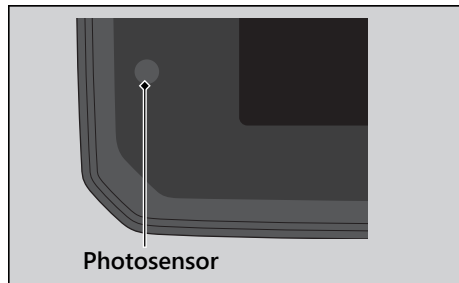

Honda RoadSync

Europe only

EU Directive



Simplified EU DoC:

Hereby, Visteon Corporation declares that the radio equipment type SAB01 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.visteondocs.com/>

български [Bulgarian]	С това фирмата Visteon Corporation декларира, че частта SAB01 е в съответствие със съществените изисквания и други приложими разпоредби на директивата 2014/53/EC.
Česky [Czech]	Visteon Corporation tímto prohlašuje, že tento SAB01 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.
Dansk [Danish]	Undertegnede Visteon Corporation erklærer herved, at følgende udstyr SAB01 overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.
Deutsch [German]	Hiermit erklärt Visteon Corporation , dass sich das Gerät SAB01 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet.
Eesti [Estonian]	Käesolevaga kinnitab Visteon Corporation seadme SAB01 vastavust direktiivi 2014/53/EL põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, Visteon Corporation , declares that this SAB01 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.
Español [Spanish]	Por medio de la presente Visteon Corporation declara que el SAB01 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/UE.

Instruments, Controls, & Other Features

Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Visteon Corporation ΔΗΛΩΝΕΙ ΟΤΙ SAB01 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EK.
Français [French]	Par la présente Visteon Corporation déclare que l'appareil SAB01 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/UE.
Italiano [Italian]	Con la presente Visteon Corporation dichiara che questo SAB01 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/UE.
Latviski [Latvian]	Ar šo Visteon Corporation deklarē, ka SAB01 atbilst Direktīvas 2014/53/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo Visteon Corporation deklaruoją, kad šis SAB01 atitinka esminius reikalavimus ir kitas 2014/53/EB Direktyvos nuostatas.
Nederlands [Dutch]	Hierbij verklaart Visteon Corporation dat het toestel SAB01 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EG.
Malti [Maltese]	Hawnhekk, Visteon Corporation , jiddikjara li dan SAB01 jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva 2014/53/UE.
Magyar [Hungarian]	Alulírott, Visteon Corporation nyilatkozik, hogy a SAB01 megfelel a vonatkozó alapvető követelményeknek és az 2014/53/EU irányelv egyéb előírásainak.
Polski [Polish]	Niniejszym Visteon Corporation oświadcza, że SAB01 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/53/UE.
Português [Portuguese]	Visteon Corporation declara que este SAB01 está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/UE.
Slovensko [Slovenian]	Visteon Corporation izjavlja, da je ta SAB01 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 2014/53/ES.
Slovensky [Slovak]	Visteon Corporation týmto vyhlasuje, že SAB01 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53/EÚ.
Suomi [Finnish]	Visteon Corporation vakuuttaa täten että SAB01 tyypinen laite on direktiivir 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]	Härmed intygar Visteon Corporation att denna SAB01 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU.

Íslenska [Icelandic]	Hér með lýsir Visteon Corporation yfir því að SAB01 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.
Norsk [Norwegian]	Visteon Corporation erklærer herved at utstyret SAB01 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 2014/53/EF.
Crnogorski jezik, Црногорски jezik [Montenegrin]	Ovim, Visteon Corporation , izjavlja da ovaj SAB01 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 2014/53/EU.
Română [Romanian]	Prin prezenta, Visteon Corporation , declară că acest SAB01 respectă cerințele esențiale și alte dispoziții relevante din Directiva 2014/53 / UE.
Türkiye [Turkey]	Visteon Corporation , işbu SAB01 'ın 2014/53 / EU Direktifinin esas şartları ve diğer ilgili hükümlerine uygun olduğunu beyan eder.
Hrvatska [Croatian]	Ovime Visteon Corporation izjavlja da je ovaj SAB01 u skladu s osnovnim zahtjevima i ostalim relevantnim odredbama Direktive 2014/53 / EU.

The following information shall also be included in the case of radio equipment intentionally emitting radio waves:

- Frequency band : **2.4 GHz**
- Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates. **Max output power = 3.5 dBm**

U.K. only

**UK
CA**

Hereby, Visteon Corporation declares that the radio equipment type SAB01 is in compliance with the relevant statutory requirement. The full text of the Declaration of Conformity is available at the following internet address:

www.visteondocs.com

Frequency band : _2.4_ GHz

- a. Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates.
- b. Max output power = _3.5_ dBm

Ukraine only

Кінцевий посібник користувача



Модель:

Діапазон частот: 2400 – 2483.5 МГц

Максимальна потужність вихідної потужності (Bluetooth): 3.5 дБм

Дана Visteon Corporation заявляє, що тип радіобладнання (позначення типу радіобладнання) відповідає Технічному регламенту радіобладнання;

Повний текст декларації про відповідність можна знайти на сайті за адресою:

<https://www.visteondocs.com/>.

Serbia only



Paraguay only



2023-02-I-0101

CONATEL NR:2023-02-I-0101

DIESA.S.A.
AVADA.DR.EUSEBIO AYALA KM 4, 5
ASUNCION
REPUBLIC OF PARAGUAY

Thailand only

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตาม
มาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช."



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับ
ใบอนุญาตให้มี ใช้งานซึ่งเครื่องวิทยุคมนาคม
หรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช.
เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุ
คมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาต
วิทยุคมนาคม ตามพระราชบัญญัติวิทยุ
คมนาคม พ.ศ. 2498



nab. | โทรคมนาคม
กำกับดูแลเพื่อประชาชน
Call Center 1200 (Inswร้)

Mexico only

Importer name and Postal address in Mexico

Uni-trade Brokers, S.C.
 Río Tizapán 1783 Col. Atlas, Guadalajara, Jalisco,
 México. C.P. 44870

Brand / model

Visteon / SAB01

Specification of voltage

VCC: 13.2 V DC
 Current: 0.2A
 Power: 2.64W

Name and address where the warranty can be served (in Mexico)

Uni-trade Brokers, S.C.
 Río Tizapán 1783 Col. Atlas, Guadalajara, Jalisco,
 México. C.P. 44870

Warranty period, items covered and possible limitations or exceptions

Uni-trade Brokers, S.C.
 Río Tizapán 1783 Col. Atlas, Guadalajara, Jalisco,
 México. C.P. 44870

Certification ID

Homologation by IFT ID: HOVISA24-07847

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada

Argentina only

® C-28865

Caring for Your Vehicle

Frequent cleaning and polishing is important to ensure the life of your Honda. A clean vehicle makes it easier to spot potential problems. In particular, seawater and salts used to prevent ice on roads promote the formation of corrosion. Also, mud and dust may accelerate front suspension wear and cause oil leaks. Always wash your vehicle thoroughly after riding on coastal, treated, muddy, or dusty roads.

Washing

Allow the engine, muffler, brakes, and other high-temperature parts to cool before washing.

1. Rinse your vehicle thoroughly using a low pressure garden hose to remove loose dirt.
2. If necessary, use a sponge or a soft towel with mild cleaner to remove road grime.
 - ▶ Clean the windscreen (Except CB500FA/FAC), headlight lens, panels, and other

plastic components with extra care to avoid scratching them.

Avoid directing water into the air cleaner, muffler, and electrical parts.

3. Thoroughly rinse your vehicle with plenty of clean water and dry with a soft, clean cloth.
4. After the vehicle dries, lubricate any moving parts.
 - ▶ Make sure that no lubricant spills onto the brakes or tyres. Brake discs, pads, drums, or shoes contaminated with oil will suffer greatly reduced braking effectiveness and can lead to a crash.
5. Lubricate the drive chain immediately after washing and drying the vehicle.
6. Apply a coat of wax to prevent corrosion.
 - ▶ Avoid products that contain harsh detergents or chemical solvents. These can damage the metal, paint, and plastic on your vehicle.Keep the wax clear of the tyres and brakes.

- ▶ If your vehicle has any mat painted parts, do not apply a coat of wax to the mat painted surface.

| Washing Precautions

Follow these guidelines when washing:

- Do not use high-pressure washers:
 - ▶ High-pressure water cleaners can damage moving parts and electrical parts, rendering them inoperable.
 - ▶ Water in the air intake can be drawn into the throttle body and/or enter the air cleaner.
- Do not direct water at the muffler:
 - ▶ Water in the muffler can prevent starting and causes rust in the muffler.
- Dry the brakes:
 - ▶ Water adversely affects braking effectiveness. After washing, apply the brakes intermittently at low speed to help dry them.
- Do not direct water under the seat:
 - ▶ Water in the under seat compartment can damage your documents and other belongings.
- Do not direct water at the air cleaner:
 - ▶ Water in the air cleaner can prevent the engine from starting.
- Do not direct water near the headlight:
 - ▶ The headlight's inside lens may fog temporarily after washing or while riding in the rain. This does not impact the headlight function. However, if you see a large amount of water or ice accumulated inside the lens(es), have your vehicle inspected by your dealer.
- Do not use wax or polishing compounds on mat painted surfaces:
 - ▶ Use a soft cloth or sponge, plenty of water, and a mild detergent to clean mat painted surfaces. Dry with a soft clean cloth.

Aluminium Components

Aluminium will corrode from contact with dirt, mud, or road salt. Clean aluminium parts regularly and follow these guidelines to avoid scratches:

- Do not use stiff brushes, steel wool, or cleaners containing abrasives.
- Avoid riding over or scraping against curbs.

Panels

Follow these guidelines to prevent scratches and blemishes:

- Wash gently using a soft sponge and plenty of water.
- To remove stubborn stains, use diluted detergent and rinse thoroughly with plenty of water.
- Avoid getting petrol, brake fluid, or detergents on the instruments, panels, or headlight.

Windscreen

Except CB500FA/FAC

Using plenty of water, clean the windscreen with a soft cloth or sponge. (Avoid using detergents or any kind of chemical cleaner on the windscreen.) Dry with a soft, clean cloth.

NOTICE

To avoid possible scratching or other damage, use only water and a soft cloth or sponge to clean the windscreen.

For a dirtier windscreen, use a diluted neutral detergent with a sponge and plenty of water. Make sure to wash off all the detergent. (Detergent residue may cause windscreen cracks.)

Replace the windscreen if scratches cannot be removed and they obstruct clear vision.

Take care to keep battery electrolyte, brake fluid, or other chemical solvents off the windscreen and screen garnish. They will damage the plastic.

Exhaust Pipe and Muffler

The exhaust pipe and muffler are stainless steel but may become stained by mud or dust.

To remove mud or dust, use a wet sponge and a liquid kitchen abrasive, then rinse well with clean water. Dry with chamois or a soft towel.

If necessary, remove heat stains by using a commercially available fine texture compound. Then, rinse by the same manner as removing mud or dust.

If the exhaust pipe and muffler are painted, do not use a commercially available abrasive kitchen cleaning compound. Use a neutral detergent to clean the painted surface on the exhaust pipe and muffler. If you are not sure if your exhaust pipe and muffler are painted, contact your dealer.

NOTICE

Even though the exhaust is made of stainless steel, it can become stained. Remove all marks and blemishes as soon as they are noticed.

Storing Your Vehicle

If you store your vehicle outdoors, you should consider using a full-body cover.

If you won't be riding for an extended period, follow these guidelines:

- Wash your vehicle and wax all painted surfaces (except mat painted surfaces). Coat chrome pieces with rust-inhibiting oil.
- Lubricate the drive chain. ➡ P. 125
- Place your vehicle on a maintenance stand and position a block so that both tyres are off the ground.
- After rain, remove the body cover and allow the vehicle to dry.
- Remove the battery (➡ P. 132) to prevent discharge. Fully charge the battery and then place it in a shaded, well-ventilated area.
 - ▶ If you leave the battery in place, disconnect the negative ⊖ terminal to prevent discharge.

After removing your vehicle from storage, inspect all maintenance items required by the Maintenance Schedule.

Transporting Your Vehicle

If your vehicle needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform and motorcycle tie-down straps. Never try to tow your vehicle with a wheel or wheels on the ground.

NOTICE

Towing your vehicle with a wheel or wheels on the ground can cause serious damage to the transmission.

You & the Environment

Owning and riding a vehicle can be enjoyable, but you must do your part to protect the environment.

Choose Sensible Cleaners

Use a biodegradable detergent when you wash your vehicle. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer.




Recycle Wastes

Put oil and other toxic wastes in approved containers and take them to a recycling centre. Call your local or state office of public works or environmental services to find a recycling centre in your area and to get instructions on how to dispose of non-recyclable wastes. Do not place used engine oil in the trash or pour it down a drain or on the ground. Used oil, petrol, coolant, and cleaning solvents contain poisons

that can hurt refuse workers and contaminate drinking water, lakes, rivers, and oceans.

Serial Numbers

The frame and engine serial numbers uniquely identify your vehicle and are required in order to register your vehicle. They may also be required when ordering replacement parts. You should record these numbers and keep them in a safe place.

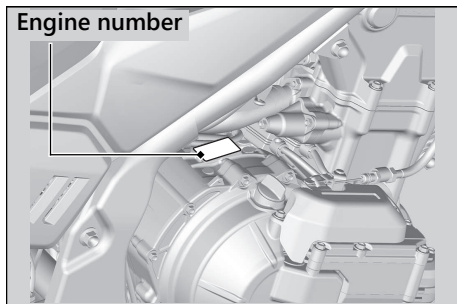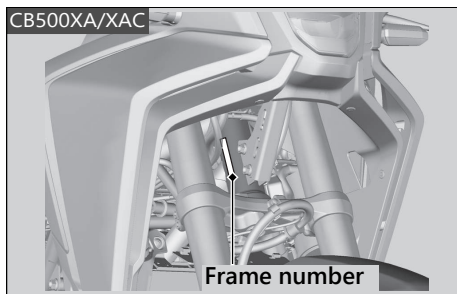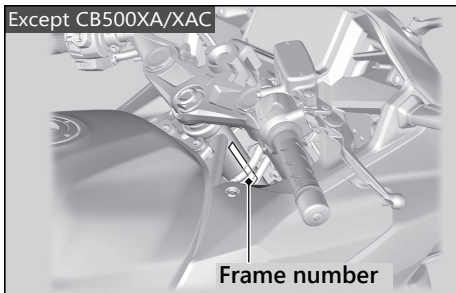

Fuels Containing Alcohol

Some conventional fuels blended with alcohol are available in some locales to help reduce emissions to meet clean air standards. If you plan to use blended fuel, check that it is unleaded and meets the minimum octane rating requirement.

Except Thailand

The following fuel blends can be used in your vehicle:

- Ethanol (ethyl alcohol) up to 10% by volume.
 - ▶ Petrol containing ethanol may be marketed under the name Gasohol.

The use of petrol containing more than 10% ethanol may:

- Damage the painting of the fuel tank.
- Damage the rubber tubes of the fuel line.
- Cause corrosion of the fuel tank.
- Cause poor drivability.

Thailand only

The following fuel blends can be used in your vehicle:

- Ethanol (ethyl alcohol) up to 20% by volume.
 - ▶ Petrol containing ethanol may be marketed under the name Gasohol.

NOTICE

Use of blended fuels containing higher than approved percentages can damage metal, rubber, plastic parts of your fuel system.

If you notice any undesirable operating symptoms or performance problems, try a different brand of petrol.

Catalytic Converter

This vehicle is equipped with a three-way catalytic converter. The catalytic converter contains precious metals that serve as catalysts in high temperature chemical reactions that convert hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) in the exhaust gases into safe compounds.

A defective catalytic converter contributes to air pollution and can impair your engine's performance. A replacement unit must be an original Honda part or equivalent.

Follow these guidelines to protect your vehicle's catalytic converter:

- Always use unleaded petrol. Leaded petrol will damage the catalytic converter.
- Keep the engine in good running condition.
- Have your vehicle serviced if your engine is misfiring, backfiring, stalling, or otherwise not running properly, stop riding and turn off the engine.

Specifications

■ Main Components

Overall length	CB500FA/FAC/ CBR500RA/RAC	ED, II ED, III ED, KO, III KO type
		2,080 mm (81.9 in)
	CB500XA/XAC	Except ED, II ED, III ED, KO, III KO type
		2,081 mm (81.9 in)
Overall width	CB500FA/FAC	ED, II ED, KO, II KO type
		2,165 mm (85.2 in)
		Except ED, II ED, KO, II KO type
		2,163 mm (85.2 in)
	CBR500RA/RAC	ED, II ED type
		800 mm (31.5 in)
		PH, II PH, V, II V type
		798 mm (31.4 in)
Overall width	CB500XA/XAC	ED, II ED, III ED type
		760 mm (29.9 in)
		TH, III TH, III PH, III V type
		765 mm (30.1 in)
	CBR500XA/XAC	KO, III KO type
		730 mm (28.7 in)
	CB500XA/XAC	Except KO, II KO type
		830 mm (32.7 in)
	CB500XA/XAC	KO, II KO type
		790 mm (31.1 in)

Overall height	CB500FA/FAC	ED, II ED type
		1,060 mm (41.7 in)
	CBR500RA/RAC	PH, II PH, V, II V type
		1,059 mm (41.7 in)
Overall height	CB500XA/XAC	ED, II ED, KO, II KO type
		1,415 mm (55.7 in)
	CB500XA/XAC	Except ED, II ED, KO, II KO type
		1,417 mm (55.8 in)
Wheelbase	Except CB500XA/XAC	ED, II ED, III ED, KO, III KO type
		1,410 mm (55.5 in)
		Except ED, II ED, III ED, KO, III KO type
		1,409 mm (55.5 in)
	CB500XA/XAC	ED, II ED, KO, II KO type
		1,445 mm (56.9 in)
	CB500XA/XAC	Except ED, II ED, KO, II KO type
		1,443 mm (56.8 in)

Minimum ground clearance	CB500FA/FAC	ED, II ED type
		145 mm (5.7 in)
	CBR500RA/RAC	PH, II PH, V, II V type
		144 mm (5.7 in)
Caster angle	CB500XA/XAC	ED, II ED, KO, II KO type
		180 mm (7.1 in)
	Except CB500XA/XAC	Except ED, II ED, KO, II KO type
		181 mm (7.1 in)
Trail	CB500XA/XAC	25° 30'
	CB500XA/XAC	27° 27'
Trail	Except CB500XA/XAC	101 mm (4.0 in)
	CB500XA/XAC	108 mm (4.3 in)

Curb weight	Except CB500XA/XAC	CB500FA
		188 kg (414 lb)
		CB500FAC V, II V type
		192 kg (423 lb)
Curb weight	CB500XA/XAC	CB500FAC ED, II ED, PH, II PH/ CBR500RA ED, III ED, TH, III TH type
		191 kg (421 lb)
		CBR500RAC
		195 kg (430 lb)
Curb weight	CB500XA/XAC	CB500XA ED, II ED, LA, II LA, TH, II TH type
		196 kg (432 lb)
		CB500XAC ED, II ED type
		199 kg (439 lb)
Curb weight	CB500XA/XAC	Except CB500XAC ED, II ED type
		200 kg (441 lb)

Specifications

Maximum weight capacity *1	Except CB500XA/XAC	Except KO, II KO, III KO type 182 kg (401 lb) KO, II KO, III KO type 162 kg (357 lb)
	CB500XA/XAC	Except KO, II KO, III KO type 190 kg (419 lb) KO, II KO, III KO type 170 kg (375 lb)
Maximum luggage weight *2	Except CB500XA/XAC	11 kg (24 lb)
	CB500XA/XAC	12 kg (26 lb)
Passenger capacity	Rider and 1 passenger	
Minimum turning radius	CB500FA/FAC	2.70 m (8.9 ft)
	CBR500RA/RAC	2.90 m (9.5 ft)
	CB500XA/XAC	Except KO, II KO type 2.40 m (7.9 ft)
		KO, II KO type 2.5 m (8.2 ft)
Displacement	ED, II ED, III ED, KO, II KO, III KO, PH, II PH, III PH type 471 cm ³ (28.7 cu-in)	
	Except ED, II ED, III ED, KO, II KO, III KO, PH, II PH, III PH type 471.03 cm ³ (28.733 cu-in)	

*1 : Including rider, passenger, all luggage, and accessories

*2 : Includes the weight of the luggage and added accessories

Bore x stroke	ED, II ED, III ED, KO, II KO, III KO type 67.0 x 66.8 mm (2.64 x 2.63 in)	
	Except ED, II ED, III ED, KO, II KO, III KO type 67.000 x 66.800 mm (2.6378 x 2.6299 in)	
Compression ratio	10.7:1	
Fuel	Except LA, II LA type Unleaded petrol Recommended: 91 RON or higher	
	LA, II LA type Unleaded petrol Recommended: 90 RON or higher	
	Except TH, II TH, III TH type ETHANOL up to 10 % by volume	
Fuel containing alcohol	TH, II TH, III TH type ETHANOL up to 20 % by volume	
Tank capacity	Except CB500XA/XAC	17.1 L (4.52 US gal, 3.76 Imp gal)
	CB500XA/XAC	ED, II ED, III ED, KO, II KO, III KO type 17.5 L (4.62 US gal, 3.85 Imp gal)
		Except ED, II ED, III ED, KO, II KO, III KO type 17.7 L (4.68 US gal, 3.89 Imp gal)

Battery	FTZ8V (Except LA, II LA, V, II V, III V type) or YTZ8V	
	12 V- 7.0 Ah (10 HR) / 7.4 Ah (20 HR)	
Gear ratio	1st	3.285
	2nd	2.105
	3rd	1.600
	4th	1.300
	5th	1.150
	6th	1.043
Reduction ratio (primary / final)		2.029 / 2.733

■ Service Data

Tyre size	Front	Except CB500XA/XAC	120/70ZR17M/C (58W)
		CB500XA/XAC	110/80R19M/C 59H
	Rear	Except CB500XA/XAC	160/60ZR17M/C (69W)
		CB500XA/XAC	160/60R17M/C 69H
Tyre type		Radial, tubeless	
Recommended Tyre	Front	Except CB500XA/XAC	DUNLOP SPORTMAX D222F W
			MICHELIN ROAD6
		CB500XA/XAC	DUNLOP MIXTOUR
	Rear	Except CB500XA/XAC	DUNLOP SPORTMAX D222 W
			MICHELIN ROAD6
		CB500XA/XAC	DUNLOP MIXTOUR
Tyre category of use ^{*1}	Normal	Permitted	
	Special	Not Permitted	
	Snow	Not Permitted	
	Moped	Not Permitted	

*1 : EU regulation

Specifications

Tyre air pressure	Front	Except CB500XA/XAC	250 kPa (2.50 kgf/cm ² , 36 psi)
		CB500XA/XAC	200 kPa (2.00 kgf/cm ² , 29 psi)
	Rear	Except CB500XA/XAC	290 kPa (2.90 kgf/cm ² , 42 psi)
		CB500XA/XAC	250 kPa (2.50 kgf/cm ² , 36 psi)
Minimum tread depth	Front	1.5 mm (0.06 in)	
	Rear	2.0 mm (0.08 in)	
Spark plug	(standard)	CPR8EA-9 (NGK)	
Spark plug gap		0.8 - 0.9 mm (0.03 - 0.04 in)	
Idle speed		1,200 ± 100 rpm	
Recommended engine oil		Honda 4-stroke motorcycle oil API Service Classification SJ or higher, excluding oils marked as "Energy Conserving" or "Resource Conserving," SAE 10W-30, JASO T 903 standard MA	

Engine oil capacity	After draining	Except CB500XA/XAC	2.5 L (2.6 US qt, 2.2 Imp qt)
		CB500XA/XAC	2.4 L (2.5 US qt, 2.1 Imp qt)
	After draining & engine oil filter change	Except CB500XA/XAC	2.7 L (2.9 US qt, 2.4 Imp qt)
		CB500XA/XAC	2.6 L (2.7 US qt, 2.3 Imp qt)
Recommended brake fluid	After disassembly	Except CB500XA/XAC	3.2 L (3.3 US qt, 2.7 Imp qt)
		CB500XA/XAC	3.1 L (3.3 US qt, 2.7 Imp qt)
Recommended cooling system capacity	1.32 L (1.39 US qt, 1.16 Imp qt)		
Recommended coolant	Except India, Thailand, Vietnam, Philippines		Pro Honda HP Coolant
	India, Thailand, Vietnam, Philippines		HONDA PRE-MIX COOLANT
Recommended drive chain lubricant	Drive chain lubricant designed specifically for O-ring chains		
	If not available, use SAE 80 or 90 gear oil.		

Drive chain slack	Except CB500XA/XAC	25 - 35 mm (1.0 - 1.4 in)
	CB500XA/XAC	30 - 40 mm (1.2 - 1.6 in)
Standard drive chain	DID520VF or RK520ELO	
	No. of links	112
Standard sprocket size	Drive sprocket	15T
	Driven sprocket	41T

■ Bulbs

Headlight	LED
Brakelight/Taillight	LED
Front turn signal/Position light	LED
Rear turn signal	LED
License plate light	12 V-5 W

■ Fuses

Main fuse	30 A
Other fuse	30 A, 15 A, 10 A

Thailand only

HELMET CAUTION LABEL

⚠ คำเตือน

อาจถึงตายหรือพิการ หากไม่สวม
หมวกนิรภัย และไม่ควรให้เด็ก
ที่เท้ายังไม่ถึงที่วางเท้าโดยสาร

Online Owner's Manual
<https://www.hondamotopub.com/>



32MLRA10
00X32-MLR-A100

XXX.XXXX.XX.T
PRINTED IN XXXXX